

Modicon TM3

Expansion Modules

Programming Guide

12/2014

EI00000001402.04

www.schneider-electric.com

Schneider
 **Electric**

The information provided in this documentation contains general descriptions and/or technical characteristics of the performance of the products contained herein. This documentation is not intended as a substitute for and is not to be used for determining suitability or reliability of these products for specific user applications. It is the duty of any such user or integrator to perform the appropriate and complete risk analysis, evaluation and testing of the products with respect to the relevant specific application or use thereof. Neither Schneider Electric nor any of its affiliates or subsidiaries shall be responsible or liable for misuse of the information contained herein. If you have any suggestions for improvements or amendments or have found errors in this publication, please notify us.

No part of this document may be reproduced in any form or by any means, electronic or mechanical, including photocopying, without express written permission of Schneider Electric.

All pertinent state, regional, and local safety regulations must be observed when installing and using this product. For reasons of safety and to help ensure compliance with documented system data, only the manufacturer should perform repairs to components.

When devices are used for applications with technical safety requirements, the relevant instructions must be followed.

Failure to use Schneider Electric software or approved software with our hardware products may result in injury, harm, or improper operating results.

Failure to observe this information can result in injury or equipment damage.

© 2014 Schneider Electric. All rights reserved.

Table of Contents



Safety Information	5
About the Book	7
Chapter 1 I/O Configuration General Information	11
I/O Configuration General Practices	12
General Description	13
Adding an Expansion Module	22
Chapter 2 TM3 Digital I/O Modules Configuration	25
Configuring the TM3 Digital I/O Modules	25
Chapter 3 TM3 Analog I/O Modules Configuration	27
3.1 TM3 Analog Input Modules	28
TM3AI2H / TM3AI2HG	29
TM3AI4 / TM3AI4G	31
TM3AI8 / TM3AI8G	33
TM3TI4 / TM3TI4G	35
TM3TI8T / TM3TI8TG	39
3.2 TM3 Analog Output Modules	45
TM3AQ2 / TM3AQ2G	46
TM3AQ4 / TM3AQ4G	48
3.3 TM3 Analog Mixed Input/Output Modules	50
TM3AM6 / TM3AM6G	51
TM3TM3 / TM3TM3G	54
3.4 TM3 Analog I/O Modules Diagnostic	58
Analog I/O Modules Diagnostic	58
Chapter 4 TM3 Expert I/O Modules Configuration	61
TM3XTYS4 Module Overview	62
TM3XTYS4 Module Configuration	63
FB_TesysU Function Block	65
Chapter 5 TM3 Safety Modules Configuration	67
5.1 Configuration: TM3 Safety Modules	68
Configuring the TM3 Safety Modules	68
5.2 General Principles: TM3 Safety Functionality Modes	69
Interlock	70
Start	71
External Device Monitoring (EDM)	74
Synchronization Time Monitoring for TM3SAK6R / TM3SAK6RG	76

5.3	General Principles: TM3 Safety Operation Modes	78
	Power-On Condition	79
	Enable Condition	80
	Output Response Time	81
	On Delay and Restart Delay	82
5.4	I/O Mapping: TM3 Safety Modules	83
	TM3SAC5R / TM3SAC5RG I/O Mapping	84
	TM3SAF5R / TM3SAF5RG I/O Mapping	85
	TM3SAFL5R / TM3SAFL5RG I/O Mapping	87
	TM3SAK6R / TM3SAK6RG I/O Mapping	89
5.5	Function Blocks: TM3 Safety Modules	91
	TM3 Safety Modules Function Blocks	91
Chapter 6	TM3 Transmitter and Receiver I/O Modules	
	Configuration	93
	Configuring the TM3 Transmitter and Receiver I/O Modules	94
	Behavior of the TM3 Transmitter and Receiver Modules	95
Glossary	97
Index	99

Safety Information



Important Information

NOTICE

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

⚠ DANGER

DANGER indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

⚠ WARNING

WARNING indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

⚠ CAUTION

CAUTION indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury.

PLEASE NOTE

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction and operation of electrical equipment and its installation, and has received safety training to recognize and avoid the hazards involved.

About the Book



At a Glance

Document Scope

This document describes the configuration of the TM3 expansion modules for SoMachine. For further information, refer to the separate documents provided in the SoMachine online help.

Validity Note

This document has been updated with the release of SoMachine V4.1 SP1.

Related Documents

Title of Documentation	Reference Number
TM3 Digital I/O Modules - Hardware Guide	EIO0000001408 (ENG) EIO0000001409 (FRA) EIO0000001410 (GER) EIO0000001411 (SPA) EIO0000001412 (ITA) EIO0000001413 (CHS) EIO0000001376 (POR) EIO0000001377 (TUR)
TM3 Analog I/O Modules - Hardware Guide	EIO0000001414 (ENG) EIO0000001415 (FRA) EIO0000001416 (GER) EIO0000001417 (SPA) EIO0000001418 (ITA) EIO0000001419 (CHS) EIO0000001378 (POR) EIO0000001379(TUR)
TM3 Expert Modules - Hardware Guide	EIO0000001420 (ENG) EIO0000001421 (FRA) EIO0000001422 (GER) EIO0000001423 (SPA) EIO0000001424 (ITA) EIO0000001425 (CHS) EIO0000001380 (POR) EIO0000001381 (TUR)

Title of Documentation	Reference Number
TM3 Safety Modules - Hardware Guide	EIO0000001831 (ENG) EIO0000001832 (FRA) EIO0000001833 (GER) EIO0000001834 (SPA) EIO0000001835 (ITA) EIO0000001836 (CHS) EIO0000001837 (POR) EIO0000001838 (TUR)
TM3 Transmitter and Receiver Modules - Hardware Guide	EIO0000001426 (ENG) EIO0000001427 (FRA) EIO0000001428 (GER) EIO0000001429 (SPA) EIO0000001430 (ITA) EIO0000001431 (CHS) EIO0000001382 (POR) EIO0000001383 (TUR)

You can download these technical publications and other technical information from our website at www.schneider-electric.com.

Product Related Information

WARNING

LOSS OF CONTROL

- The designer of any control scheme must consider the potential failure modes of control paths and, for certain critical control functions, provide a means to achieve a safe state during and after a path failure. Examples of critical control functions are emergency stop and overtravel stop, power outage and restart.
- Separate or redundant control paths must be provided for critical control functions.
- System control paths may include communication links. Consideration must be given to the implications of unanticipated transmission delays or failures of the link.
- Observe all accident prevention regulations and local safety guidelines.¹
- Each implementation of this equipment must be individually and thoroughly tested for proper operation before being placed into service.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

¹ For additional information, refer to NEMA ICS 1.1 (latest edition), "Safety Guidelines for the Application, Installation, and Maintenance of Solid State Control" and to NEMA ICS 7.1 (latest edition), "Safety Standards for Construction and Guide for Selection, Installation and Operation of Adjustable-Speed Drive Systems" or their equivalent governing your particular location.

WARNING

UNINTENDED EQUIPMENT OPERATION

- Only use software approved by Schneider Electric for use with this equipment.
- Update your application program every time you change the physical hardware configuration.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Chapter 1

I/O Configuration General Information

Introduction

This chapter provides general information to help you configure TM3 expansion modules for SoMachine.

What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
I/O Configuration General Practices	12
General Description	13
Adding an Expansion Module	22

I/O Configuration General Practices

Match Software and Hardware Configuration

The I/O that may be embedded in your controller is independent of the I/O that you may have added in the form of I/O expansion. It is important that the logical I/O configuration within your program matches the physical I/O configuration of your installation. If you add or remove any physical I/O to or from the I/O expansion bus, update your application configuration (this is also true for any field bus devices you may have in your installation). Otherwise, there is the potential that the expansion bus or field bus will no longer function while the embedded I/O that may be present in your controller will continue to operate.

WARNING

UNINTENDED EQUIPMENT OPERATION

Update the configuration of your program each time you add or delete an I/O expansion, or you add or delete any devices on your field bus.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Use the `GetRightBusStatus` function regularly to monitor the expansion bus status.

General Description

Introduction

The range of TM3 expansion modules includes:

- Digital modules, classified as follows:
 - Input modules ([see page 13](#))
 - Output modules ([see page 14](#))
 - Mixed input/output modules ([see page 15](#))
- Analog modules, classified as follows:
 - Input modules ([see page 16](#))
 - Output modules ([see page 17](#))
 - Mixed input/output modules ([see page 18](#))
- Expert modules ([see page 19](#))
- Safety modules ([see page 19](#))
- Transmitter and receiver modules ([see page 21](#))

TM3 Digital Input Modules

The following table shows the TM3 digital input expansion modules, with corresponding channel type, nominal voltage/current, and terminal type. For information on configuration of these modules, refer to the TM3 Digital I/O Modules Configuration ([see page 25](#)) section.

Reference	Channels	Channel Type	Voltage Current	Terminal Type / Pitch
TM3DI8A	8	Regular inputs	120 Vac 7.5 mA	Removable screw terminal block / 5.08 mm
TM3DI8	8	Regular inputs	24 Vdc 7 mA	Removable screw terminal block / 5.08 mm
TM3DI8G	8	Regular inputs	24 Vdc 7 mA	Removable spring terminal block / 5.08 mm
TM3DI16	16	Regular inputs	24 Vdc 7 mA	Removable screw terminal block / 3.81 mm
TM3DI16G	16	Regular inputs	24 Vdc 7 mA	Removable spring terminal block / 3.81 mm
TM3DI16K	16	Regular inputs	24 Vdc 5 mA	HE10 (MIL 20) connector
TM3DI32K	32	Regular inputs	24 Vdc 5 mA	HE10 (MIL 20) connector

TM3 Digital Output Modules

The following table shows the TM3 digital output modules, with corresponding channel type, nominal voltage/current, and terminal type. For information on configuration of these modules, refer to the TM3 Digital I/O Modules Configuration ([see page 25](#)) section.

Reference	Channels	Channel Type	Voltage Current	Terminal Type / Pitch
TM3DQ8R	8	Relay outputs	24 Vdc / 240 Vac 7 A maximum per common line / 2 A maximum per output	Removable screw terminal block / 5.08 mm
TM3DQ8RG	8	Relay outputs	24 Vdc / 240 Vac 7 A maximum per common line / 2 A maximum per output	Removable spring terminal block / 5.08 mm
TM3DQ8T	8	Regular transistor outputs (source)	24 Vdc 4 A maximum per common line/0.5 A maximum per output	Removable screw terminal block / 5.08 mm
TM3DQ8TG	8	Regular transistor outputs (source)	24 Vdc 4 A maximum per common line/0.5 A maximum per output	Removable spring terminal block / 5.08 mm
TM3DQ8U	8	Regular transistor outputs (sink)	24 Vdc 4 A maximum per common line/0.5 A maximum per output	Removable screw terminal block / 5.08 mm
TM3DQ8UG	8	Regular transistor outputs (sink)	24 Vdc 4 A maximum per common line/0.5 A maximum per output	Removable spring terminal block / 5.08 mm
TM3DQ16R	16	Relay outputs	24 Vdc / 240 Vac 8 A maximum per common line / 2 A maximum per output	Removable screw terminal block / 3.81 mm
TM3DQ16RG	16	Relay outputs	24 Vdc / 240 Vac 8 A maximum per common line / 2 A maximum per output	Removable spring terminal block / 3.81 mm
TM3DQ16T	16	Regular transistor outputs (source)	24 Vdc 4 A maximum per common line / 0.5 A maximum per output	Removable screw terminal block / 3.81 mm

Reference	Channels	Channel Type	Voltage Current	Terminal Type / Pitch
TM3DQ16TG	16	Regular transistor outputs (source)	24 Vdc 4 A maximum per common line / 0.5 A maximum per output	Removable spring terminal block / 3.81 mm
TM3DQ16U	16	Regular transistor outputs (sink)	24 Vdc 2 A maximum per common line / 0.4 A maximum per output	Removable screw terminal block / 3.81 mm
TM3DQ16UG	16	Regular transistor outputs (sink)	24 Vdc 2 A maximum per common line / 0.4 A maximum per output	Removable spring terminal block / 3.81 mm
TM3DQ16TK	16	Regular transistor outputs (source)	24 Vdc 2 A maximum per common line / 0.1 A maximum per output	HE10 (MIL 20) connector
TM3DQ16UK	16	Regular transistor outputs (sink)	24 Vdc 2 A maximum per common line / 0.1 A maximum per output	HE10 (MIL 20) connector
TM3DQ32TK	32	Regular transistor outputs (source)	24 Vdc 2 A maximum per common line / 0.1 A maximum per output	HE10 (MIL 20) connector
TM3DQ32UK	32	Regular transistor outputs (sink)	24 Vdc 2 A maximum per common line / 0.1 A maximum per output	HE10 (MIL 20) connector

TM3 Digital Mixed Input/Output Modules

This following table shows the TM3 mixed I/O modules, with corresponding channel type, nominal voltage/current, and terminal type. For information on configuration of these modules, refer to the TM3 Digital I/O Modules Configuration ([see page 25](#)) section.

Reference	Channels	Channel Type	Voltage Current	Terminal Type / Pitch
TM3DM8R	4	Regular inputs	24 Vdc 7 mA	Removable screw terminal block / 5.08 mm
	4	Relay outputs	24 Vdc / 240 Vac 7 A maximum per common line / 2 A maximum per output	

Reference	Channels	Channel Type	Voltage Current	Terminal Type / Pitch
TM3DM8RG	4	Regular inputs	24 Vdc 7 mA	Removable spring terminal block / 5.08 mm
	4	Relay outputs	24 Vdc / 240 Vac 7 A maximum per common line / 2 A maximum per output	
TM3DM24R	16	Regular inputs	24 Vdc 7 mA	Removable screw terminal block / 3.81 mm
	8	Relay outputs	24 Vdc / 240 Vac 7 A maximum per common line / 2 A maximum per output	
TM3DM24RG	16	Regular inputs	24 Vdc 7 mA	Removable spring terminal block / 3.81 mm
	8	Relay outputs	24 Vdc / 240 Vac 7 A maximum per common line / 2 A maximum per output	

TM3 Analog Input Modules

The following table shows the TM3 analog input expansion modules, with corresponding channel type, nominal voltage/current, and terminal type. For information on configuration of these modules, refer to the TM3 Analog Input Modules Configuration ([see page 28](#)) section.

Reference	Resolution	Channels	Channel Type	Mode	Terminal Type / Pitch
TM3AI2H	16 bit, or 15 bit + sign	2	inputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA	Removable screw terminal block / 5.08 mm
TM3AI2HG	16 bit, or 15 bit + sign	2	inputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA	Removable spring terminal block / 5.08 mm
TM3AI4	12 bit, or 11 bit + sign	4	inputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA	Removable screw terminal block / 3.81 mm
TM3AI4G	12 bit, or 11 bit + sign	4	inputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA	Removable spring terminal blocks / 3.81 mm

Reference	Resolution	Channels	Channel Type	Mode	Terminal Type / Pitch
TM3AI8	12 bit, or 11 bit + sign	8	inputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA	Removable screw terminal block / 3.81 mm
TM3AI8G	12 bit, or 11 bit + sign	8	inputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA	Removable spring terminal blocks / 3.81 mm
TM3TI4	16 bit, or 15 bit + sign	4	inputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA Thermocouple PT100/1000 NI100/1000	Removable screw terminal block / 3.81 mm
TM3TI4G	16 bit, or 15 bit + sign	4	inputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA Thermocouple PT100/1000 NI100/1000	Removable spring terminal blocks / 3.81 mm
TM3TI8T	16 bit, or 15 bit + sign	8	inputs	Thermocouple NTC/PTC	Removable screw terminal block / 3.81 mm
TM3TI8TG	16 bit, or 15 bit + sign	8	inputs	Thermocouple NTC/PTC	Removable spring terminal blocks / 3.81 mm

TM3 Analog Output Modules

The following table shows the TM3 analog output modules, with corresponding channel type, nominal voltage/current, and terminal type. For information on configuration of these modules, refer to the TM3 Analog Output Modules Configuration ([see page 45](#)) section.

Reference	Resolution	Channels	Channel Type	Mode	Terminal Type / Pitch
TM3AQ2	12 bit, or 11 bit + sign	2	outputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA	Removable screw terminal block / 5.08 mm

Reference	Resolution	Channels	Channel Type	Mode	Terminal Type / Pitch
TM3AQ2G	12 bit, or 11 bit + sign	2	outputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA	Removable spring terminal block / 5.08 mm
TM3AQ4	12 bit, or 11 bit + sign	4	outputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA	Removable screw terminal block / 5.08 mm
TM3AQ4G	12 bit, or 11 bit + sign	4	outputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA	Removable spring terminal block / 5.08 mm

TM3 Analog Mixed Input/Output Modules

This following table shows the TM3 analog mixed I/O modules, with corresponding channel type, nominal voltage/current, and terminal type. For information on configuration of these modules, refer to the TM3 Analog Mixed I/O Modules Configuration ([see page 50](#)) section.

Reference	Resolution	Channels	Channel Type	Mode	Terminal Type / Pitch
TM3AM6	12 bit, or 11 bit + sign	4	inputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA	Removable screw terminal block / 3.81 mm
		2	outputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA	
TM3AM6G	12 bit, or 11 bit + sign	4	inputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA	Removable spring terminal block / 3.81 mm
		2	outputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA	
TM3TM3	16 bit, or 15 bit + sign	2	inputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA Thermocouple PT100/1000 NI100/1000	Removable screw terminal block / 5.08 mm
	12 bit, or 11 bit + sign	1	output	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA	

Reference	Resolution	Channels	Channel Type	Mode	Terminal Type / Pitch
TM3TM3G	16 bit, or 15 bit + sign	2	inputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA Thermocouple PT100/1000 NI100/1000	Removable spring terminal block / 5.08 mm
	12 bit, or 11 bit + sign	1	output	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA	

TM3 Expert Modules

The following table shows the TM3 expert expansion modules, with corresponding terminal type. For information on configuration of these modules, refer to the TM3 Expert I/O Modules Configuration ([see page 61](#)) section.

Reference	Description	Terminal Type / Pitch
TM3XTYS4	TeSys module	4 front connectors RJ-45 1 removable power supply connector / 5.08 mm

TM3 Safety Modules

This table contains the TM3 safety modules ([see Modicon TM3, Safety Modules, Hardware Guide](#)), with the corresponding channel type, nominal voltage/current, and terminal type:

Reference	Function Category	Channels	Channel type	Voltage Current	Terminal type
TM3SAC5R	1 function, up to category 3	1 or 2 ⁽¹⁾	Safety input	24 Vdc 100 mA maximum	3.81 mm (0.15 in.) and 5.08 mm (0.20 in.), removable screw terminal block
		Start ⁽²⁾	Input		
		3 in parallel	Relay outputs Normally open	24 Vdc / 230 Vac 6 A maximum per output	
TM3SAC5RG	1 function, up to category 3	1 or 2 ⁽¹⁾	Safety input	24 Vdc 100 mA maximum	3.81 mm (0.15 in.) and 5.08 mm (0.20 in.), removable spring terminal block
		Start ⁽²⁾	Input		
		3 in parallel	Relay outputs Normally open	24 Vdc / 230 Vac 6 A maximum per output	

(1) Depending on external wiring
 (2) Non-monitored start

Reference	Function Category	Channels	Channel type	Voltage Current	Terminal type
TM3SAF5R	1 function, up to category 4	2 (1)	Safety inputs	24 Vdc 100 mA maximum	3.81 mm (0.15 in.) and 5.08 mm (0.20 in.), removable screw terminal block
		Start	Input		
		3 in parallel	Relay outputs Normally open	24 Vdc / 230 Vac 6 A maximum per output	
TM3SAF5RG	1 function, up to category 4	2 (1)	Safety inputs	24 Vdc 100 mA maximum	3.81 mm (0.15 in.) and 5.08 mm (0.20 in.), removable spring terminal block
		Start	Input		
		3 in parallel	Relay outputs Normally open	24 Vdc / 230 Vac 6 A maximum per output	
TM3SAFL5R	2 functions, up to category 3	2 (1)	Safety inputs	24 Vdc 100 mA maximum	3.81 mm (0.15 in.) and 5.08 mm (0.20 in.), removable screw terminal block
		Start	Input		
		3 in parallel	Relay outputs Normally open	24 Vdc / 230 Vac 6 A maximum per output	
TM3SAFL5RG	2 functions, up to category 3	2 (1)	Safety inputs	24 Vdc 100 mA maximum	3.81 mm (0.15 in.) and 5.08 mm (0.20 in.), removable spring terminal block
		Start	Input		
		3 in parallel	Relay outputs Normally open	24 Vdc / 230 Vac 6 A maximum per output	
TM3SAK6R	3 functions, up to category 4	1 or 2 (1)	Safety inputs	24 Vdc 100 mA maximum	3.81 mm (0.15 in.) and 5.08 mm (0.20 in.), removable screw terminal block
		Start	Input		
		3 in parallel	Relay outputs Normally open	24 Vdc / 230 Vac 6 A maximum per output	
TM3SAK6RG	3 functions, up to category 4	1 or 2 (1)	Safety inputs	24 Vdc 100 mA maximum	3.81 mm (0.15 in.) and 5.08 mm (0.20 in.), removable spring terminal block
		Start	Input		
		3 in parallel	Relay outputs Normally open	24 Vdc / 230 Vac 6 A maximum per output	

(1) Depending on external wiring

(2) Non-monitored start

For more information on the terms methods used concerning functional safety as they apply to the TM3 Safety Modules, refer to the sections TM3 Safety Functionality modes ([see page 69](#)) and TM3 Safety Operation Modes ([see page 78](#)).

TM3 Transmitter and Receiver Modules

The following table shows the TM3 transmitter and receiver expansion modules, with corresponding terminal type. For information on configuration of these modules, refer to the TM3 Transmitter and Receiver I/O Modules Configuration ([see page 93](#)) section.

Reference	Description	Terminal Type / Pitch
TM3XTRA1	Data transmitter module for remote I/O	1 front connector RJ-45 1 screw for functional ground connection
TM3XREC1	Data receiver module for remote I/O	1 front connector RJ-45 1 removable power supply connector / 5.08 mm

Adding an Expansion Module

Adding a Module

To add an expansion module to your controller, select the expansion module in the **Hardware Catalog**, drag it to the **Devices tree**, and drop it on one of the highlighted nodes.

For more information on adding a device to your project, refer to:

- Using the Drag-and-drop Method (see *SoMachine, Programming Guide*)
- Using the Contextual Menu or Plus Button (see *SoMachine, Programming Guide*)

I/O Configuration


The I/O mapping of an expansion module is carried out through the **I/O Mapping** tab of the expansion module configuration.

This table describes how to configure an expansion module:


Step	Action
1	Double-click the expansion module node in the Devices tree to display the I/O Mapping tab.
2	Edit the parameters of the I/O Mapping tab to configure the expansion module.

I/O Mapping Tab Description

This figure shows the **I/O Mapping** tab:

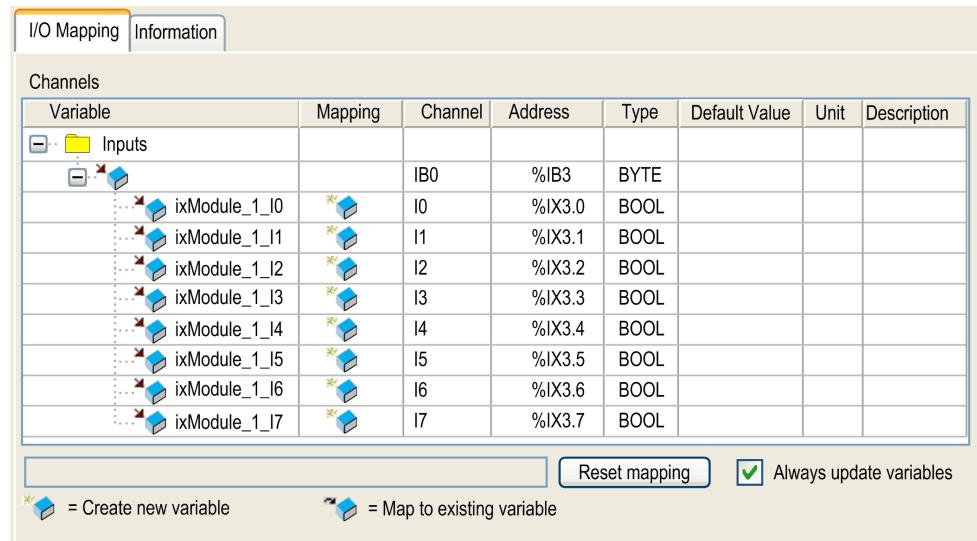

This table describes each parameter of the **I/O Mapping** tab:

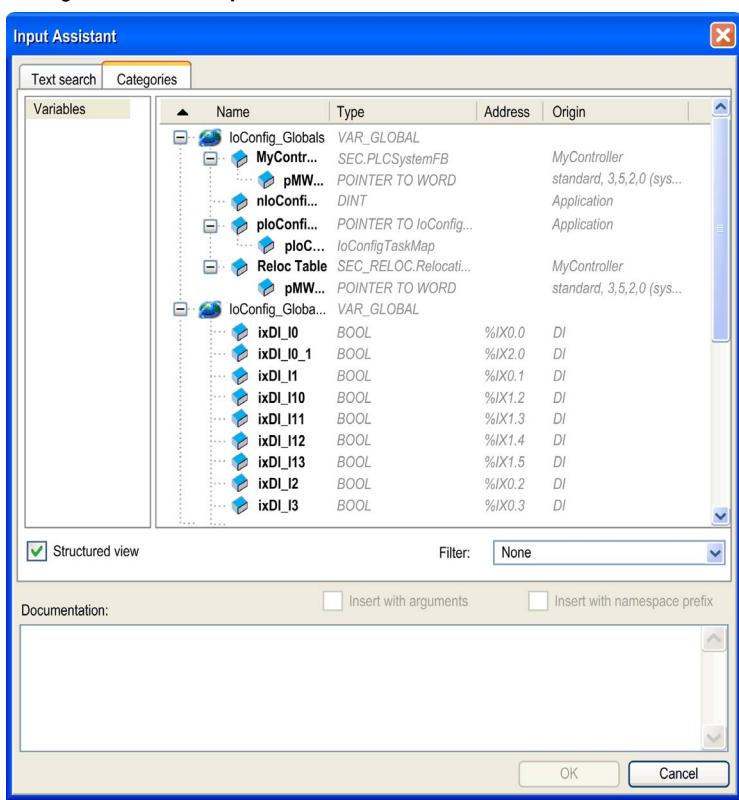Parameter	Description
Variable	<p>Allows you to map the channel on a variable.</p> <p>NOTE: Expand the list of variables from the category Inputs or Outputs.</p> <p>You can map a channel by either creating a new variable or mapping to an existing variable.</p> <p>Create new variable: Double-click the variable to enter the new variable name. A new variable is created if the variable does not already exist.</p> <p>Map to existing variable: Double-click the variable and click [...] to open the Input Assistant window. Select the variable from the list and press OK.</p> <p>This figure shows the Input Assistant window:</p>  <p>The screenshot shows the 'Input Assistant' dialog box. It has tabs for 'Text search' and 'Categories'. Under 'Variables', there is a tree view and a table view. The table view lists variables with columns for Name, Type, Address, and Origin. Some variables are expanded to show their sub-components. At the bottom, there are checkboxes for 'Structured view' and 'Filter' (set to 'None'), and buttons for 'OK' and 'Cancel'.</p>
Mapping	Indicates whether the channel is mapped on a new variable or an existing variable.
Channel	Displays the channel name of the device.

Parameter	Description
Address	Displays the address of the channel. NOTE: If the channel is mapped to an existing variable, corresponding address appears as strikethrough text in the table.
Type	Displays the data type of the channel.
Default Value	Indicates the value taken by the output when the controller is in a STOPPED or HALT state. Double-click the cell to change the default value. You can toggle between the following values: <ul style="list-style-type: none">● No value (<i>empty cell</i>)● TRUE● FALSE
Unit	Displays the unit of the channel value.
Description	Allows you to enter a short description of the channel.

Chapter 2

TM3 Digital I/O Modules Configuration

Configuring the TM3 Digital I/O Modules

Introduction

The range of TM3 digital I/O expansion modules includes:

- TM3 Digital Input Modules ([see page 13](#))
- TM3 Digital Output Modules ([see page 14](#))
- TM3 Digital Mixed Input/Output Modules ([see page 15](#))

Configuring the Modules

Refer to the I/O Configuration ([see page 22](#)) for detailed information on the configuration of the digital I/O expansion modules in SoMachine.

Chapter 3

TM3 Analog I/O Modules Configuration

Introduction

This chapter describes how to configure the TM3 analog I/O modules.

The range of TM3 analog I/O expansion modules includes:

- TM3 Analog Input Modules ([see page 16](#))
- TM3 Analog Output Modules ([see page 17](#))
- TM3 Analog Mixed Input/Output Modules ([see page 18](#))

What Is in This Chapter?

This chapter contains the following sections:

Section	Topic	Page
3.1	TM3 Analog Input Modules	28
3.2	TM3 Analog Output Modules	45
3.3	TM3 Analog Mixed Input/Output Modules	50
3.4	TM3 Analog I/O Modules Diagnostic	58

Section 3.1

TM3 Analog Input Modules

What Is in This Section?

This section contains the following topics:

Topic	Page
TM3AI2H / TM3AI2HG	29
TM3AI4 / TM3AI4G	31
TM3AI8 / TM3AI8G	33
TM3TI4 / TM3TI4G	35
TM3TI8T / TM3TI8TG	39

TM3AI2H / TM3AI2HG

Introduction

The TM3AI2H (screw terminal block) / TM3AI2HG (spring terminal block) expansion module feature 2 analog input channels with 16-bit resolution.

The channel input types are:

- 0...10 V
- -10...+10 V
- 0...20 mA
- 4...20 mA

For further hardware information, refer to TM3AI2H / TM3AI2HG (see *Modicon TM3, Analog I/O Modules, Hardware Guide*).

NOTE: For example, if you have physically wired the analog channel for a voltage signal and you configure the channel for a current signal in SoMachine, you may damage the analog circuit.

NOTICE

INOPERABLE EQUIPMENT

Verify that the physical wiring of the analog circuit is compatible with the software configuration for the analog channel.

Failure to follow these instructions can result in equipment damage.

Configuring the Module

For each input, you can define:

Parameter		Value	Default Value	Description
Type		Not used 0 - 10 V -10 - +10 V 0 - 20 mA 4 - 20 mA	Not used	Choose the mode of the channel.
Min.	0 - 10 V	-32768...32767	0	Specifies the lower measurement limit.
	-10 - +10 V		-10000	
	0 - 20 mA		0	
	4 - 20 mA		4000	
Max.	0 - 10 V	-32768...32767	10000	Specifies the upper measurement limit.
	-10 - +10 V		10000	
	0 - 20 mA		20000	
	4 - 20 mA		20000	

Parameter	Value	Default Value	Description
Input Filter	0...1000	0	Specifies the filtering time (0...10 s) by increment of 10 ms.
Sampling	1ms/Channel	1ms/Channel	Specifies the sampling period of the channel.
Status Enabled	Yes No	Yes	Enables the diagnostic byte of each channel. If the status is disabled (value = No), the status bytes <code>IBStatusIW0</code> and <code>IBStatusIW1</code> do not contain relevant information.

I/O Mapping Tab

Variables can be defined and named in the **I/O Mapping** tab. Additional information such as topological addressing is also provided in this tab.

This table describes the **I/O Mapping** tab:

Variable	Channel	Type	Description
Inputs	IW0	INT	Current value of the input 0
	IW1	INT	Current value of the input 1
Diagnostic	<code>IBStatusIW0</code>	BYTE	Status of input 0 (see page 58)
	<code>IBStatusIW1</code>	BYTE	Status of input 1 (see page 58)

For further generic descriptions, refer to I/O Mapping Tab Description ([see page 22](#)).

TM3AI4 / TM3AI4G

Introduction

The TM3AI4 (screw terminal block) / TM3AI4G (spring terminal block) expansion module feature 4 analog input channels with 12-bit resolution.

The channel input types are:

- 0...10 V
- -10...+10 V
- 0...20 mA
- 4...20 mA

For further hardware information, refer to TM3AI4 / TM3AI4G (see *Modicon TM3, Analog I/O Modules, Hardware Guide*).

NOTE: For example, if you have physically wired the analog channel for a voltage signal and you configure the channel for a current signal in SoMachine, you may damage the analog circuit.

NOTICE

INOPERABLE EQUIPMENT

Verify that the physical wiring of the analog circuit is compatible with the software configuration for the analog channel.

Failure to follow these instructions can result in equipment damage.

Configuring the Module

For each input, you can define:

Parameter		Value	Default Value	Description
Type		Not used 0 - 10 V -10 - +10 V 0 - 20 mA 4 - 20 mA	Not used	Choose the mode of the channel.
Min.	0 - 10 V	-32768...32767 ¹	0	Specifies the lower measurement limit.
	-10 - +10 V		-10000	
	0 - 20 mA		0	
	4 - 20 mA		4000	
Max.	0 - 10 V	-32768...32767 ¹	10000	Specifies the upper measurement limit.
	-10 - +10 V		10000	
	0 - 20 mA		20000	
	4 - 20 mA		20000	

Parameter	Value	Default Value	Description
Input Filter	0...1000	0	Specifies the filtering time (0...10 s) by increment of 10 ms.
Sampling	1ms/Channel 10ms/Channel	1ms/Channel	Specifies the sampling period of the channel.
Status Enabled	Yes No	Yes	Enables the diagnostic byte of each channel. If the status is disabled (value = No), the status bytes <code>IBStatusIWx</code> do not contain relevant information.

¹ The 12-bit data (0 to 4095) processed in the analog I/O module can be linear-converted to a value between -32768 and 32767.

I/O Mapping Tab

Variables can be defined and named in the **I/O Mapping** tab. Additional information such as topological addressing is also provided in this tab.

This table describes the **I/O Mapping** tab:

Variable	Channel	Type	Description
Inputs	IW0	INT	Current value of the input 0
	IW1	INT	Current value of the input 1
	IW2	INT	Current value of the input 2
	IW3	INT	Current value of the input 3
Diagnostic	<code>IBStatusIW0</code>	BYTE	Status of input 0 (see page 58)
	<code>IBStatusIW1</code>	BYTE	Status of input 1 (see page 58)
	<code>IBStatusIW2</code>	BYTE	Status of input 2 (see page 58)
	<code>IBStatusIW3</code>	BYTE	Status of input 3 (see page 58)

For further generic descriptions, refer to I/O Mapping Tab Description ([see page 22](#)).

TM3AI8 / TM3AI8G

Introduction

The TM3AI8 (screw terminal block) / TM3AI8G (spring terminal block) expansion module feature 8 analog input channels with 12-bit resolution.

The channel input types are:

- 0...10 V
- -10...+10 V
- 0...20 mA
- 4...20 mA

For further hardware information, refer to TM3AI8 / TM3AI8G (see *Modicon TM3, Analog I/O Modules, Hardware Guide*).

NOTE: For example, if you have physically wired the analog channel for a voltage signal and you configure the channel for a current signal in SoMachine, you may damage the analog circuit.

NOTICE

INOPERABLE EQUIPMENT

Verify that the physical wiring of the analog circuit is compatible with the software configuration for the analog channel.

Failure to follow these instructions can result in equipment damage.

Configuring the Module

For each input, you can define:

Parameter		Value	Default Value	Description
Type		Not used 0 - 10 V -10 - +10 V 0 - 20 mA 4 - 20 mA	Not used	Choose the mode of the channel.
Min.	0 - 10 V	-32768...32767 ¹	0	Specifies the lower measurement limit.
	-10 - +10 V		-10000	
	0 - 20 mA		0	
	4 - 20 mA		4000	
Max.	0 - 10 V	-32768...32767 ¹	10000	Specifies the upper measurement limit.
	-10 - +10 V		10000	
	0 - 20 mA		20000	
	4 - 20 mA		20000	

Parameter	Value	Default Value	Description
Input Filter	0...1000	0	Specifies the filtering time (0...10 s) by increment of 10 ms.
Sampling	1ms/Channel 10ms/Channel	1ms/Channel	Specifies the sampling period of the channel.
Status Enabled	Yes No	Yes	Enables the diagnostic byte of each channel. If the status is disabled (value = No), the status bytes <code>IBStatusIWx</code> do not contain relevant information.

¹ The 12-bit data (0 to 4095) processed in the analog I/O module can be linear-converted to a value between -32768 and 32767.

I/O Mapping Tab

Variables can be defined and named in the **I/O Mapping** tab. Additional information such as topological addressing is also provided in this tab.

This table describes the **I/O Mapping** tab:

Variable	Channel	Type	Description
Inputs	IW0	INT	Current value of the input 0
	IW1	INT	Current value of the input 1
	IW2	INT	Current value of the input 2
	IW3	INT	Current value of the input 3
	IW4	INT	Current value of the input 4
	IW5	INT	Current value of the input 5
	IW6	INT	Current value of the input 6
	IW7	INT	Current value of the input 7
Diagnostic	<code>IBStatusIW0</code>	BYTE	Status of input 0 (see page 58)
	<code>IBStatusIW1</code>	BYTE	Status of input 1 (see page 58)
	<code>IBStatusIW2</code>	BYTE	Status of input 2 (see page 58)
	<code>IBStatusIW3</code>	BYTE	Status of input 3 (see page 58)
	<code>IBStatusIW4</code>	BYTE	Status of input 4 (see page 58)
	<code>IBStatusIW5</code>	BYTE	Status of input 5 (see page 58)
	<code>IBStatusIW6</code>	BYTE	Status of input 6 (see page 58)
	<code>IBStatusIW7</code>	BYTE	Status of input 7 (see page 58)

For further generic descriptions, refer to I/O Mapping Tab Description ([see page 22](#)).

TM3TI4 / TM3TI4G

Introduction

The TM3TI4 (screw terminal block) / TM3TI4G (spring terminal block) expansion module feature 4 analog input channels with 16-bit resolution.

The channel input types are:

- 0...10 V
- -10...+10 V
- 0...20 mA
- 4...20 mA
- K thermocouple
- J thermocouple
- R thermocouple
- S thermocouple
- B thermocouple
- E thermocouple
- T thermocouple
- N thermocouple
- C thermocouple
- PT100
- PT1000
- NI100
- NI1000

For further hardware information, refer to TM3TI4 / TM3TI4G (see *Modicon TM3, Analog I/O Modules, Hardware Guide*).

NOTE: For example, if you have physically wired the analog channel for a voltage signal and you configure the channel for a current signal in SoMachine, you may damage the analog circuit.

NOTICE

INOPERABLE EQUIPMENT

Verify that the physical wiring of the analog circuit is compatible with the software configuration for the analog channel.

Failure to follow these instructions can result in equipment damage.

Configuring the Module

For each input, you can define:

Parameter		Value	Default Value	Description
Type		Not used 0 - 10 V -10 - +10 V 0 - 20 mA 4 - 20 mA K Thermocouple J Thermocouple R Thermocouple S Thermocouple B Thermocouple E Thermocouple T Thermocouple N Thermocouple C Thermocouple PT100 PT1000 NI100 NI1000	Not used	Choose the mode of the channel.
Scope		Customized Celsius (0.1°C) Fahrenheit (0.1°F) Fahrenheit (0.2°F)*	Customized	The range of values for a channel. * Only for B and C thermocouples.
Min.	0 - 10 V	-32768...32767	0	Specifies the lower measurement limit.
	-10 - +10 V		-10000	
	0 - 20 mA		0	
	4 - 20 mA		4000	
	Temperature	See the table below		
Max.	0 - 10 V	-32768...32767	10000	Specifies the upper measurement limit.
	-10 - +10 V		10000	
	0 - 20 mA		20000	
	4 - 20 mA		20000	
	Temperature	See the table below		
Input Filter		0...1000	0	Specifies the filtering time (0...10 s) by increment of 10 ms.

Parameter	Value	Default Value	Description
Sampling	10ms/Channel 100ms/Channel	100ms/Channel	Specifies the sampling period of the channel.
Status Enabled	Yes No	Yes	Enables the diagnostic byte of each channel. If the status is disabled (value = No), the status bytes <code>IBStatusIWx</code> do not contain relevant information.

Type	Customized		Celsius (0.1 ° C)		Fahrenheit		
	Minimum	Maximum	Minimum	Maximum	Minimum	Maximum	Unit
K Thermocouple	-32768	32767	-2000	13000	-3280	23720	0.1 ° F
J Thermocouple	-32768	32767	-2000	10000	-3280	18320	0.1 ° F
R Thermocouple	-32768	32767	0	17600	320	32000	0.1 ° F
S Thermocouple	-32768	32767	0	17600	320	32000	0.1 ° F
B Thermocouple	-32768	32767	0	18200	160	16540	0.2 ° F
E Thermocouple	-32768	32767	-2000	8000	-3280	14720	0.1 ° F
T Thermocouple	-32768	32767	-2000	4000	-3280	7520	0.1 ° F
N Thermocouple	-32768	32767	-2000	13000	-3280	23720	0.1 ° F
C Thermocouple	-32768	32767	0	23150	160	20995	0.2 ° F
PT100	-32768	32767	-2000	8500	-3280	15620	0.1 ° F
PT1000	-32768	32767	-2000	6000	-3280	11120	0.1 ° F
NI100	-32768	32767	-600	1800	-760	3560	0.1 ° F
NI1000	-32768	32767	-600	1800	-760	3560	0.1 ° F

I/O Mapping Tab

Variables can be defined and named in the **I/O Mapping** tab. Additional information such as topological addressing is also provided in this tab.

This table describes the **I/O Mapping** tab:

Variable	Channel	Type	Description
Inputs	IW0	INT	Current value of the input 0
	IW1	INT	Current value of the input 1
	IW2	INT	Current value of the input 2
	IW3	INT	Current value of the input 3

Variable	Channel	Type	Description
Diagnostic	IBStatusIW0	BYTE	Status of input 0 (see page 58)
	IBStatusIW1	BYTE	Status of input 1 (see page 58)
	IBStatusIW2	BYTE	Status of input 2 (see page 58)
	IBStatusIW3	BYTE	Status of input 3 (see page 58)

For further generic descriptions, refer to I/O Mapping Tab Description ([see page 22](#)).

TM3TI8T / TM3TI8TG

Introduction

The TM3TI8T (screw terminal block) / TM3TI8TG (spring terminal block) expansion module feature 8 analog input channels with 16-bit resolution.

The channel input types are:

- K thermocouple
- J thermocouple
- R thermocouple
- S thermocouple
- B thermocouple
- E thermocouple
- T thermocouple
- N thermocouple
- C thermocouple
- NTC thermistor
- PTC thermistor
- Ohmmeter

For further hardware information, refer to TM3TI8T / TM3TI8TG (*see Modicon TM3, Analog I/O Modules, Hardware Guide*).

NOTE: For example, if you have physically wired the analog channel for a voltage signal and you configure the channel for a current signal in SoMachine, you may damage the analog circuit.

NOTICE

INOPERABLE EQUIPMENT

Verify that the physical wiring of the analog circuit is compatible with the software configuration for the analog channel.

Failure to follow these instructions can result in equipment damage.

Configuring the Module

For each input, you can define:

Parameter	Value	Default Value	Description
Type ● Not used	-	Not used	Choose the parameter type and scope value for the channel.
Type ● K Thermocouple ● J Thermocouple ● R Thermocouple ● S Thermocouple ● E Thermocouple ● T Thermocouple ● N Thermocouple ● NTC Thermistor	Scope ● Customized ● Celsius (0.1°C) ● Fahrenheit (0.1°F)	Celsius (0.1°C)	
Type ● B Thermocouple ● C Thermocouple	Scope ● Customized ● Celsius (0.1°C) ● Fahrenheit (0.2°F)	Celsius (0.1°C)	
Type ● PTC Thermistor	Scope ● Customized ● Threshold	Threshold	
Type ● Ohmmeter	Scope ● Resistance (Ω)	Resistance	
Minimum	See the table below		Specifies the lower measurement limit.
Maximum	See the table below		Specifies the upper measurement limit.
Rref (used only with NTC probe (see page 41))	1...65535	330	Reference resistance in Ohm at temperature Tref.
Tref (used only with NTC probe)	1...1000	25	Reference temperature value in Celsius.
Beta (used only with NTC probe)	1...32767	3569	Sensitivity of NTC probe in Kelvin.
Input Filter	0...1000	0	Specifies the filtering time (0...10 s) by increment of 10 ms.
Sampling	100ms/Channel	100ms/Channel	Specifies the sampling period of the channel.
Status Enabled	Yes No	Yes	Enables the diagnostic byte of each channel. If the status is disabled (value = No), the status bytes <code>IBStatusIWx</code> do not contain relevant information.

Parameter	Value	Default Value	Description
High Threshold (used only with PTC probe (see page 42))	100...10000	3100	Activation threshold
Low Threshold (used only with PTC probe)	100...10000	1500	Reactivation threshold

Type	Customized		Celsius (0.1 °C)		Fahrenheit		
	Minimum	Maximum	Minimum	Maximum	Minimum	Maximum	Unit
K Thermocouple	-32768	32767	-2000	13000	-3280	23720	0.1 °F
J Thermocouple	-32768	32767	-2000	10000	-3280	18320	0.1 °F
R Thermocouple	-32768	32767	0	17600	320	32000	0.1 °F
S Thermocouple	-32768	32767	0	17600	320	32000	0.1 °F
B Thermocouple	-32768	32767	0	18200	160	16540	0.2 °F
E Thermocouple	-32768	32767	-2000	8000	-3280	14720	0.1 °F
T Thermocouple	-32768	32767	-2000	4000	-3280	7520	0.1 °F
N Thermocouple	-32768	32767	-2000	13000	-3280	23720	0.1 °F
C Thermocouple	-32768	32767	0	23150	160	20995	0.2 °F
NTC Thermistor	-32768	32767	-900	1500	-1300	3020	0.1 °F
PTC Thermistor	-32768	32767	–	–	–	–	–

NTC Probe

The temperature (Tm) varies in relation to the resistance (r) following the equation below:

$$Tm(r) = \frac{1}{\frac{1}{T} + \frac{1}{B} \ln \left[\frac{r}{R} \right]}$$

Where:

- Tm = temperature measured by the probe, in Kelvin
- r = physical value of the resistance in Ohm
- R = reference resistance in Ohm at temperature T
- T = reference temperature in Kelvin
- B = sensitivity of the NTC probe in Kelvin

R, T, and B must be greater or equal to 1.


NOTE: 25 °C = 77 °F = 298.15 K

PTC Probe


This table shows the read value according to the resistance:

Resistance Value	Read Value
Less than low threshold	1
Between thresholds	2
Greater than high threshold	4

This figure shows the threshold operation:

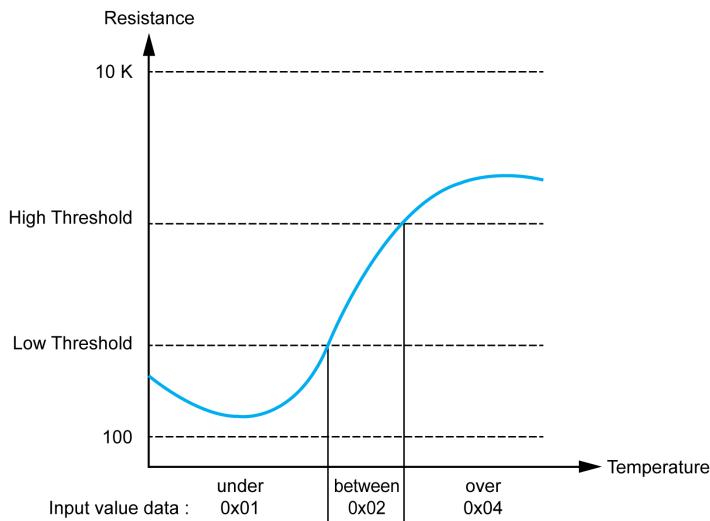

This figure shows an example hysteresis curve :

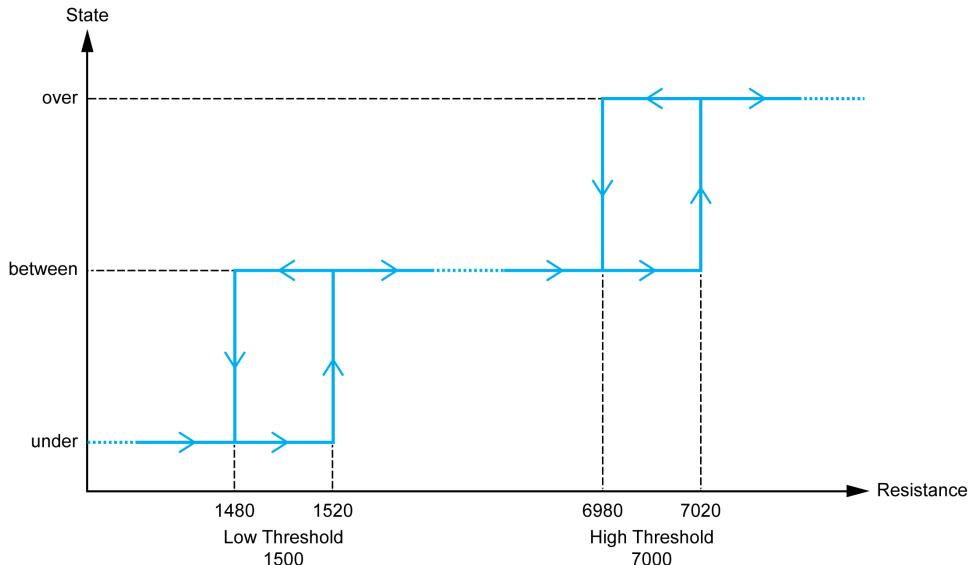

Ohmmeter

This table shows the minimum and maximum values:

Parameter	Value
Minimum	100 Ω
Maximum	32 kΩ

I/O Mapping Tab

Variables can be defined and named in the **I/O Mapping** tab. Additional information such as topological addressing is also provided in this tab.

This table describes the **I/O Mapping** tab:

Variable	Channel	Type	Description
Inputs	IW0	INT	Current value of the input 0
	IW1	INT	Current value of the input 1
	IW2	INT	Current value of the input 2
	IW3	INT	Current value of the input 3
	IW4	INT	Current value of the input 4
	IW5	INT	Current value of the input 5
	IW6	INT	Current value of the input 6
	IW7	INT	Current value of the input 7
Diagnostic	IBStatusIW0	BYTE	Status of input 0 (see page 58)
	IBStatusIW1	BYTE	Status of input 1 (see page 58)
	IBStatusIW2	BYTE	Status of input 2 (see page 58)
	IBStatusIW3	BYTE	Status of input 3 (see page 58)
	IBStatusIW4	BYTE	Status of input 4 (see page 58)
	IBStatusIW5	BYTE	Status of input 5 (see page 58)
	IBStatusIW6	BYTE	Status of input 6 (see page 58)
	IBStatusIW7	BYTE	Status of input 7 (see page 58)

For further generic descriptions, refer to I/O Mapping Tab Description ([see page 22](#)).

Section 3.2

TM3 Analog Output Modules

What Is in This Section?

This section contains the following topics:

Topic	Page
TM3AQ2 / TM3AQ2G	46
TM3AQ4 / TM3AQ4G	48

TM3AQ2 / TM3AQ2G

Introduction

The TM3AQ2 (screw terminal block) / TM3AQ2G (spring terminal block) expansion module feature 2 analog output channels with 12-bit resolution.

The channel output types are:

- 0...10 V
- -10...+10 V
- 0...20 mA
- 4...20 mA

For further hardware information, refer to TM3AQ2 / TM3AQ2G (see *Modicon TM3, Analog I/O Modules, Hardware Guide*).

NOTE: For example, if you have physically wired the analog channel for a voltage signal and you configure the channel for a current signal in SoMachine, you may damage the analog circuit.

NOTICE

INOPERABLE EQUIPMENT

Verify that the physical wiring of the analog circuit is compatible with the software configuration for the analog channel.

Failure to follow these instructions can result in equipment damage.

Configuring the Module

For each output, you can define:

Parameter		Value	Default Value	Description
Type		Not used 0 - 10 V -10 - +10 V 0 - 20 mA 4 - 20 mA	Not used	Choose the mode of the channel.
Min.	0 - 10 V	-32768...32767 ¹	0	Specifies the lower measurement limit.
	-10 - +10 V		-10000	
	0 - 20 mA		0	
	4 - 20 mA		4000	
Max.	0 - 10 V	-32768...32767 ¹	10000	Specifies the upper measurement limit.
	-10 - +10 V		10000	
	0 - 20 mA		20000	
	4 - 20 mA		20000	

Parameter	Value	Default Value	Description
Status Enabled	Yes No	Yes	Enables the diagnostic byte of each channel. If the status is disabled (value = No), the status bytes <code>IBStatusQWx</code> do not contain relevant information.

¹ The 12-bit data (0 to 4095) processed in the analog I/O module can be linear-converted to a value between -32768 and 32767.

I/O Mapping Tab

Variables can be defined and named in the **I/O Mapping** tab. Additional information such as topological addressing is also provided in this tab.

This table describes the **I/O Mapping** tab:

Variable	Channel	Type	Default Value	Description
Outputs	QW0	INT	-32768...32767	Command word of the output 0
	QW1	INT	-32768...32767	Command word of the output 1
Diagnostic	IBStatusQW0	BYTE	-	Status of output 0 (<i>see page 59</i>)
	IBStatusQW1	BYTE	-	Status of output 1 (<i>see page 59</i>)

For further generic descriptions, refer to I/O Mapping Tab Description (*see page 22*).

TM3AQ4 / TM3AQ4G

Introduction

The TM3AQ4 (screw terminal block) / TM3AQ4G (spring terminal block) expansion module feature 4 analog output channels with 12-bit resolution.

The channel output types are:

- 0...10 V
- -10...+10 V
- 0...20 mA
- 4...20 mA

For further hardware information, refer to TM3AQ4 / TM3AQ4G (see *Modicon TM3, Analog I/O Modules, Hardware Guide*).

NOTE: For example, if you have physically wired the analog channel for a voltage signal and you configure the channel for a current signal in SoMachine, you may damage the analog circuit.

NOTICE

INOPERABLE EQUIPMENT

Verify that the physical wiring of the analog circuit is compatible with the software configuration for the analog channel.

Failure to follow these instructions can result in equipment damage.

Configuring the Module

For each output, you can define:

Parameter		Value	Default Value	Description
Type		Not used 0 - 10 V -10 - +10 V 0 - 20 mA 4 - 20 mA	Not used	Choose the mode of the channel.
Scope		Customized	Customized	The range of values for a channel.
Min.	0 - 10 V	-32768...32767 ¹	0	Specifies the lower measurement limit.
	-10 - +10 V		-10000	
	0 - 20 mA		0	
	4 - 20 mA		4000	

Parameter		Value	Default Value	Description
Max.	0 - 10 V	-32768...32767 ¹	10000	Specifies the upper measurement limit.
	-10 - +10 V		10000	
	0 - 20 mA		20000	
	4 - 20 mA		20000	
Status Enabled		Yes No	Yes	Enables the diagnostic byte of each channel. If the status is disabled (value = No), the status bytes <code>IBStatusQWx</code> do not contain relevant information.

¹ The 12-bit data (0 to 4095) processed in the analog I/O module can be linear-converted to a value between -32768 and 32767.

I/O Mapping Tab

Variables can be defined and named in the **I/O Mapping** tab. Additional information such as topological addressing is also provided in this tab.

This table describes the **I/O Mapping** tab:

Variable	Channel	Type	Default Value	Description
Outputs	QW0	INT	-32768...32767	Command word of the output 0
	QW1	INT	-32768...32767	Command word of the output 1
	QW2	INT	-32768...32767	Command word of the output 2
	QW3	INT	-32768...32767	Command word of the output 3
Diagnostic	<code>IBStatusQW0</code>	BYTE	-	Status of output 0 (see page 59)
	<code>IBStatusQW1</code>	BYTE	-	Status of output 1 (see page 59)
	<code>IBStatusQW2</code>	BYTE	-	Status of output 2 (see page 59)
	<code>IBStatusQW3</code>	BYTE	-	Status of output 3 (see page 59)

For further generic descriptions, refer to I/O Mapping Tab Description ([see page 22](#)).

Section 3.3

TM3 Analog Mixed Input/Output Modules

What Is in This Section?

This section contains the following topics:

Topic	Page
TM3AM6 / TM3AM6G	51
TM3TM3 / TM3TM3G	54

TM3AM6 / TM3AM6G

Introduction

The TM3AM6 (screw terminal block) / TM3AM6G (spring terminal block) expansion module feature 4 analog input channels and 2 analog output channels with 12-bit resolution.

The channel input types are:

- 0...10 V
- -10...+10 V
- 0...20 mA
- 4...20 mA

The channel output types are:

- 0...10 V
- -10...+10 V
- 0...20 mA
- 4...20 mA

For further hardware information, refer to TM3AM6 / TM3AM6G (see *Modicon TM3, Analog I/O Modules, Hardware Guide*).

NOTE: For example, if you have physically wired the analog channel for a voltage signal and you configure the channel for a current signal in SoMachine, you may damage the analog circuit.

NOTICE

INOPERABLE EQUIPMENT

Verify that the physical wiring of the analog circuit is compatible with the software configuration for the analog channel.

Failure to follow these instructions can result in equipment damage.

Configuring the Module

For each input, you can define:

Parameter		Value	Default Value	Description
Type		Not used 0 - 10 V -10 - +10 V 0 - 20 mA 4 - 20 mA	Not used	Choose the mode of the channel.
Min.	0 - 10 V	-32768...32767 ¹	0	Specifies the lower measurement limit.
	-10 - +10 V		-10000	
	0 - 20 mA		0	
	4 - 20 mA		4000	

Parameter		Value	Default Value	Description
Max.	0 - 10 V	-32768...32767 ¹	10000	Specifies the upper measurement limit.
	-10 - +10 V		10000	
	0 - 20 mA		20000	
	4 - 20 mA		20000	
Input Filter		0...1000	0	Specifies the filtering time (0...10 s) by increment of 10 ms.
Sampling		1ms/Channel 10ms/Channel	1ms/Channel	Specifies the sampling period of the channel.
Status Enabled		Yes No	Yes	Enables the diagnostic byte of each channel. If the status is disabled (value = No), the status bytes <code>IBStatusIWx</code> do not contain relevant information.

¹ The 12-bit data (0 to 4095) processed in the analog I/O module can be linear-converted to a value between -32768 and 32767.

For each output, you can define:

Parameter		Value	Default Value	Description
Type		Not used 0 - 10 V -10 - +10 V 0 - 20 mA 4 - 20 mA	Not used	Choose the mode of the channel.
Min.	0 - 10 V	-32768...32767 ¹	0	Specifies the lower measurement limit.
	-10 - +10 V		-10000	
	0 - 20 mA		0	
	4 - 20 mA		4000	
Max.	0 - 10 V	-32768...32767 ¹	10000	Specifies the upper measurement limit.
	-10 - +10 V		10000	
	0 - 20 mA		20000	
	4 - 20 mA		20000	
Status Enabled		Yes No	Yes	Enables the diagnostic byte of each channel. If the status is disabled (value = No), the status bytes <code>IBStatusQWx</code> do not contain relevant information.

¹ The 12-bit data (0 to 4095) processed in the analog I/O module can be linear-converted to a value between -32768 and 32767.

I/O Mapping Tab

Variables can be defined and named in the **I/O Mapping** tab. Additional information such as topological addressing is also provided in this tab.

This table describes the **I/O Mapping** tab:

Variable	Channel	Type	Default Value	Description
Inputs	IW0	INT	-	Current value of the input 0
	IW1	INT	-	Current value of the input 1
	IW2	INT	-	Current value of the input 2
	IW3	INT	-	Current value of the input 3
Outputs	QW0	INT	-32768...32767	Command word of the output 0
	QW1	INT	-32768...32767	Command word of the output 1
Diagnostic	IBStatusIW0	BYTE	-	Status of input 0 (see page 58)
	IBStatusIW1	BYTE	-	Status of input 1 (see page 58)
	IBStatusIW2	BYTE	-	Status of input 2 (see page 58)
	IBStatusIW3	BYTE	-	Status of input 3 (see page 58)
	IBStatusQW0	BYTE	-	Status of output 0 (see page 59)
	IBStatusQW1	BYTE	-	Status of output 1 (see page 59)

For further generic descriptions, refer to I/O Mapping Tab Description ([see page 22](#)).

TM3TM3 / TM3TM3G

Introduction

The TM3TM3 (screw terminal block) / TM3TM3G (spring terminal block) expansion module feature 2 analog input channels with 16-bit resolution and 1 analog output with 12-bit resolution.

The channel input types are:

- 0...10 V
- -10...+10 V
- 0...20 mA
- 4...20 mA
- K thermocouple
- J thermocouple
- R thermocouple
- S thermocouple
- B thermocouple
- E thermocouple
- T thermocouple
- N thermocouple
- C thermocouple
- PT100
- PT1000
- NI100
- NI1000

The channel output types are:

- 0...10 V
- -10...+10 V
- 0...20 mA
- 4...20 mA

For further hardware information, refer to TM3TM3 / TM3TM3G (*see Modicon TM3, Analog I/O Modules, Hardware Guide*).

NOTE: For example, if you have physically wired the analog channel for a voltage signal and you configure the channel for a current signal in SoMachine, you may damage the analog circuit.

NOTICE

INOPERABLE EQUIPMENT

Verify that the physical wiring of the analog circuit is compatible with the software configuration for the analog channel.

Failure to follow these instructions can result in equipment damage.

Configuring the Module

For each input, you can define:

Parameter		Value	Default Value	Description
Type		Not used 0 - 10 V -10 - +10 V 0 - 20 mA 4 - 20 mA K Thermocouple J Thermocouple R Thermocouple S Thermocouple B Thermocouple E Thermocouple T Thermocouple N Thermocouple C Thermocouple PT100 PT1000 NI100 NI1000	Not used	Choose the mode of the channel.
Scope		Customized Celsius (0.1° C) Fahrenheit (0.1° F) Fahrenheit (0.2° F)*	Customized	The range of values for a channel. * Only for B and C thermocouples.
Min.	0 - 10 V	-32768...32767	0	Specifies the lower measurement limit.
	-10 - +10 V		-10000	
	0 - 20 mA		0	
	4 - 20 mA		4000	
	Temperature		See the table below	
Max.	0 - 10 V	-32768...32767	10000	Specifies the upper measurement limit.
	-10 - +10 V		10000	
	0 - 20 mA		20000	
	4 - 20 mA		20000	
	Temperature		See the table below	
Input Filter		0...1000	0	Specifies the filtering time (0...10 s) by increment of 10 ms.

Parameter	Value	Default Value	Description
Sampling	10ms/Channel 100ms/Channel	100ms/Channel	Specifies the sampling period of the channel.
Status Enabled	Yes No	Yes	Enables the diagnostic byte of each channel. If the status is disabled (value = No), the status bytes <code>IBStatusIWx</code> do not contain relevant information.

Type	Customized		Celsius (0.1 ° C)		Fahrenheit		
	Minimum	Maximum	Minimum	Maximum	Minimum	Maximum	Unit
K Thermocouple	-32768	32767	-2000	13000	-3280	23720	0.1 ° F
J Thermocouple	-32768	32767	-2000	10000	-3280	18320	0.1 ° F
R Thermocouple	-32768	32767	0	17600	320	32000	0.1 ° F
S Thermocouple	-32768	32767	0	17600	320	32000	0.1 ° F
B Thermocouple	-32768	32767	0	18200	160	16540	0.2 ° F
E Thermocouple	-32768	32767	-2000	8000	-3280	14720	0.1 ° F
T Thermocouple	-32768	32767	-2000	4000	-3280	7520	0.1 ° F
N Thermocouple	-32768	32767	-2000	13000	-3280	23720	0.1 ° F
C Thermocouple	-32768	32767	0	23150	160	20995	0.2 ° F
PT100	-32768	32767	-2000	8500	-3280	15620	0.1 ° F
PT1000	-32768	32767	-2000	6000	-3280	11120	0.1 ° F
NI100	-32768	32767	-600	1800	-760	3560	0.1 ° F
NI1000	-32768	32767	-600	1800	-760	3560	0.1 ° F

For the output, you can define:

Parameter	Value	Default Value	Description
Type	Not used 0 - 10 V -10 - +10 V 0 - 20 mA 4 - 20 mA	Not used	Choose the mode of the channel.
Min.	0 - 10 V -10 - +10 V 0 - 20 mA 4 - 20 mA	-32768...32767 ¹ 	Specifies the lower measurement limit.

Parameter		Value	Default Value	Description
Max.	0 - 10 V	-32768...32767 ¹	10000	Specifies the upper measurement limit.
	-10 - +10 V		10000	
	0 - 20 mA		20000	
	4 - 20 mA		20000	
Status Enabled		Yes No	Yes	Enables the diagnostic byte of each channel. If the status is disabled (value = No), the status byte <code>IBStatusQW0</code> does not contain relevant information.

¹ The 12-bit data (0 to 4095) processed in the analog I/O module can be linear-converted to a value between -32768 and 32767.

I/O Mapping Tab

Variables can be defined and named in the **I/O Mapping** tab. Additional information such as topological addressing is also provided in this tab.

This table describes the **I/O Mapping** tab:

Variable	Channel	Type	Default Value	Description
Inputs	IW0	INT	-	Current value of the input 0
	IW1	INT	-	Current value of the input 1
Outputs	QW0	INT	-32768...32767	Command word of the output 0
Diagnostic	IBStatusIW0	BYTE	-	Status of input 0 (see page 58)
	IBStatusIW1	BYTE	-	Status of input 1 (see page 58)
	IBStatusQW0	BYTE	-	Status of output 0 (see page 59)

For further generic descriptions, refer to I/O Mapping Tab Description ([see page 22](#)).

Section 3.4

TM3 Analog I/O Modules Diagnostic

Analog I/O Modules Diagnostic

Introduction

The operating status of each I/O channel is given by the diagnostic bytes in the **I/O Mapping** tab:

- IBStatusIWx for input channel x
- IBStatusQWx for output channel x

NOTE: If the **Status Enabled** parameter in the **I/O Configuration** tab is deactivated, it is possible to update the value of the diagnostic bytes by calling the `TM3_GetModuleInternalStatus` function.

For more information about `TM3_GetModuleInternalStatus` function:

- Refer to *M241 Controller PLC System Library Guide* for Modicon M241 Logic Controller.
- Refer to *M251 Controller PLC System Library Guide* for Modicon M251 Logic Controller.

Input Diagnostic Byte Description

This table describes the IBStatusIWx diagnostic byte:

Byte value	Description
0	Normal
1	Undefined
2	Undefined
3	Configuration error detected
4	External power supply error detected
5	Wiring error detected (high limit exceeded)
6	Wiring error detected (low limit exceeded)
7	General hardware error detected
8...255	Undefined

Output Diagnostic Byte Description

This table describes the IBStatusQWx diagnostic byte:

Byte value	Description
0	Normal
1	Undefined
2	Undefined
3	Configuration error detected
4	External power supply error detected
5	Undefined
6	Undefined
7	General hardware error detected
8...255	Undefined

Chapter 4

TM3 Expert I/O Modules Configuration

Introduction

This chapter describes how to configure the TM3 expert I/O modules ([see page 19](#)).

What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
TM3XTYS4 Module Overview	62
TM3XTYS4 Module Configuration	63
FB_TesysU Function Block	65

TM3XTYS4 Module Overview

Introduction

The TeSys expansion module TM3XTYS4 is equipped with:

- 4 RJ-45 connectors to connect to Tesys starter motor devices
- 2 digital inputs for each channel:
 - Forward
 - Reverse
- 3 digital outputs for each channel:
 - Ready
 - Run
 - Trip
- Removable 24 Vdc power supply

The TeSys expansion module is connected to the logic controller through the TM3 bus. TM3XTYS4 expansion modules can be connected to the logic controller in any order.

Adding and Configuring the TM3XTYS4 Module

To add a TM3XTYS4 module to a project:

1. Add the expansion module ([see page 22](#)) to your logic controller.
2. Configure the expansion module inputs and outputs.
3. Insert a channel ([see page 64](#)) that is connected to the device.
4. Select the device type ([see page 64](#)) that is associated with the channel.
5. Add the FB_TeSysU function block ([see page 65](#)) to your application and configure it in order to control the device directly from the application.

TM3XTYS4 Module Configuration

Introduction

This chapter describes how to configure the TM3 expert I/O modules ([see page 19](#)).

Configuring the Module

Configuration of the TM3XTYS4 module is carried out through the **I/O Mapping** tab of the module.

In the **Devices tree**, double-click the **Module_n** subnode of the module, where *n* is the unique identifier of the module. The **I/O Mapping** tab appears.

The digital inputs of this module are:

Channel	Address	Description
CH1_Ready	%IXx.0	Input active if the selector of TeSys is in the ON position.
CH1_Run	%IXx.1	Input active if the power contacts of TeSys are closed.
CH1_Trip	%IXx.2	Input active if the selector of TeSys is in the TRIP position.
CH2_Ready	%IXx.3	Input active if the selector of TeSys is in the ON position.
CH2_Run	%IXx.4	Input active if the power contacts of TeSys are closed.
CH2_Trip	%IXx.5	Input active if the selector of TeSys is in the TRIP position.
CH3_Ready	%IXx.6	Active if the selector of TeSys is in the ON position.
CH3_Run	%IXx.7	Input active if the power contacts of TeSys are closed.
CH3_Trip	%IXx.8	Input active if the selector of TeSys is in the TRIP position.
CH4_Ready	%IXx.9	Input active if the selector of TeSys is in the ON position.
CH4_Run	%IXx.10	Input active if the power contacts of TeSys are closed.
CH4_Trip	%IXx.11	Input active if the selector of TeSys is in the TRIP position.
Error	%IXx.12	Over current error flag of protect source outputs (0:Error, 1:Normal).

The digital outputs of this module are:

Tesys	Address	Description
CH1_Dir1Control	%QXx.0	This 24 V output drives the direct (forward) command of the motor.
CH1_Dir2Control	%QXx.1	This 24 V output drives the reverse (backward) command of the motor.
CH2_Dir1Control	%QXx.2	This 24 V output drives the direct (forward) command of the motor.
CH2_Dir2Control	%QXx.3	This 24 V output drives the reverse (backward) command of the motor.

Tesys	Address	Description
CH3_Dir1Control	%QXx.4	This 24 V output drives the direct (forward) command of the motor.
CH3_Dir2Control	%QXx.5	This 24 V output drives the reverse (backward) command of the motor.
CH4_Dir1Control	%QXx.6	This 24 V output drives the direct (forward) command of the motor.
CH4_Dir2Control	%QXx.7	This 24 V output drives the reverse (backward) command of the motor.

Inserting a Channel

Each channel connected to a device can be separately configured.

To add channels to the configuration:

Step	Action
1	Select the Module_x node in the Devices tree and click  , or right-click the module node and select Add Device from the context menu. Result: The Add Device dialog box is displayed.
2	Select the channel to insert in the Name list.
3	Click Add Device . Result: The selected channel is added to the project and displayed in the Devices tree as a new Tesys_Channel_x subnode of the expansion module. The Add Device dialog box remains open. You can do the following: <ul style="list-style-type: none">● Add another channel by repeating step 2 of this procedure.● Or, click the Close button.

Selecting the Associated Device Type

To configure the type of device associated with a channel:

Step	Action
1	Double-click the Tesys_Channel_x node in the Devices tree .
2	On the I/O Configuration tab, double-click in the Value column and select the type of Tesys starter motor connected to the channel.

FB_TesysU Function Block

Overview

The `FB_TesysU` function block is included in the TM3 library.

Graphical Representation



I/O Variable Description

This table describes the input variables:

Input	Type	Comment
xRev	BOOL	True sets the direct (forward) command. False sets the reverse (backward) command
xRun	BOOL	True starts the function block.
xEnable	BOOL	True enables the function block.

This table describes the output variables:

Output	Type	Comment
xDiag	TU_CONSTANTS	The current status when <code>q_xError</code> is set to True: <ul style="list-style-type: none"> • <code>TU_STDBY</code>. Tesys: off, xRun: on • <code>TU_OFF</code>. Tesys: off, xRun: off • <code>TU_RUN</code>. Tesys: on, xRun: on • <code>TU_RDY</code>. Tesys: on, xRun: on • <code>TU_TRIP</code>. Tesys: on, xRun: on • <code>TU_ERR_REV_ON_DOL</code>. Tesys: on, xRun: on • <code>TU_ERR_REV_AT_RUN</code>. Tesys: on, xRun: on • <code>TU_ERR_OVERCURRENT</code>. Tesys: on, xRun: on • <code>FB_DISABLED</code>. Tesys: on, xRun: on
<code>q_xReady</code>	BOOL	True sets the selector of the module to the ON position
<code>q_xRun</code>	BOOL	True closes the power contacts of the module.
<code>q_xTrip</code>	BOOL	True sets the selector of the module to the TRIP position
<code>q_xError</code>	BOOL	True retrieves the current detected error status.

Chapter 5

TM3 Safety Modules Configuration

Introduction

This chapter describes how to configure the TM3 Safety Modules (*see page 19*).

What Is in This Chapter?

This chapter contains the following sections:

Section	Topic	Page
5.1	Configuration: TM3 Safety Modules	68
5.2	General Principles: TM3 Safety Functionality Modes	69
5.3	General Principles: TM3 Safety Operation Modes	78
5.4	I/O Mapping: TM3 Safety Modules	83
5.5	Function Blocks: TM3 Safety Modules	91

Section 5.1

Configuration: TM3 Safety Modules

Configuring the TM3 Safety Modules

Introduction

For more information on the terms methods used concerning functional safety as they apply to the TM3 Safety Modules, refer to the TM3 Safety Modules Hardware Guide (*see Modicon TM3, Safety Modules, Hardware Guide*).

Configuring the Modules

Refer to the I/O Configuration (*see page 22*) for detailed information on the configuration of the safety expansion modules in SoMachine.

Section 5.2

General Principles: TM3 Safety Functionality Modes

What Is in This Section?

This section contains the following topics:

Topic	Page
Interlock	70
Start	71
External Device Monitoring (EDM)	74
Synchronization Time Monitoring for TM3SAK6R / TM3SAK6RG	76

Interlock

Description

In 2 channel operation, both inputs related to both channels must be seen open before a safety cycle can be started and the output can be closed. This functionality ensures that the output circuit cannot be activated if one of the input channels is not able to be open (for example in case of contact malfunction or short circuit).

The interlock function checks if both **K1** and **K2** relays are open before the safety cycle. In case of short power-supply interruption, one of the relays may be off while the other remains on. To allow the operation of the module on power return, the power-supply interruption should be at least 100 ms in duration.

Power Cycle

The interlock condition is reset by a power cycle. Information about a possible malfunction detected, provided by the interlock, is interrupted and not recovered before the next safety cycle.

Reset

The logic controller can request to reset the safety module by communicating with the safety module on the TM3 Bus.

When the reset signal is active, both safety module internal relays are deactivated.

The reset signal can be used to reset the module after the activation of the interlock function.

NOTE: The reset signal overwrites an activated interlock function. Information about a possible malfunction detected, provided by the interlock, is interrupted and not recovered before the next safety cycle.

The interruption of the interlock function could lead to the degradation of the safety level of the system. The reset of this function should only be done manually after verification of the intended functionality.

WARNING

UNINTENDED EQUIPMENT OPERATION

- Do not use the reset function to reset an interlock programmatically.
- Always verify the interlock notification before using the reset function.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Start

Description


Two modes are available for the start functionality:

Non-monitored start: When non-monitored, the start mode can be:

- Manually controlled (conditioned by the input state)
- Automatic (hardwired)

Monitored start: When monitored, the start mode is manually controlled (conditioned by the input edge).

This figure represents the events sequence for the two start modes available:

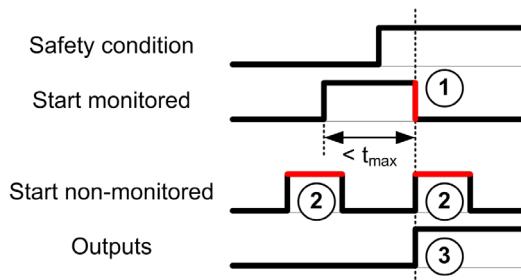

Events description:

1. Monitored start condition is triggered by a falling edge on the **start** input.
2. Non-monitored start condition is available as long as the **start** input is on.
The start condition can be valid before the safety-related input.
3. The outputs get activated only if start + safety-related input conditions are valid.

NOTE: For a monitored start, the falling edge on the **start** input must appear within 20 seconds (± 5 seconds) after activation of the start input at nominal supply voltage.

Both the safety conditions and the start conditions must be valid before allowing the activation of outputs.

WARNING

UNINTENDED EQUIPMENT OPERATION


Do not use either the monitored start or the non-monitored start as a safety function.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Manual Non-Monitored Start

The start condition is valid when the **start** input is closed (start switch is pressed).

This figure represents how to connect a switch on a TM3 safety module to configure a manual non-monitored start:

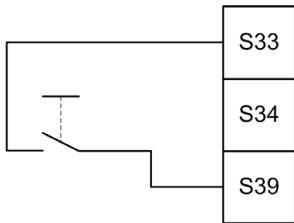

Automatic Start

There is no start interlock when automatic start is used. After a power cycle, the output behavior depends solely on the state of the inputs.

WARNING


UNINTENDED EQUIPMENT OPERATION

Do not use automatic start if a start interlock is required in your application after a power cycle.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

The module is in automatic start mode if the **start** input is permanently closed (hardwired).

This figure represents how to connect a switch on a TM3 safety module to configure an automatic start:

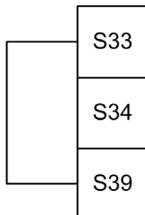

NOTE: There is no start interlock in automatic start after a power cycle.


Monitored Start

In monitored start mode, the outputs are activated when:

- All required inputs are closed
- A falling edge is applied to the **start** input. A falling edge means that the start switch is pressed and released again.

At nominal supply voltage, the start switch must be released within 20 seconds (± 5 seconds) after it has been closed. The exact delay depends on supply voltage and ambient temperature.

This figure represents how to connect a switch on a TM3 safety module to configure a monitored start (when available on the module):

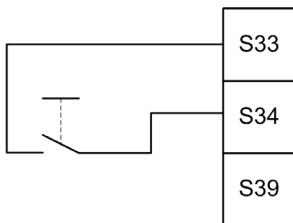

External Device Monitoring (EDM)

Description

External device monitoring functionality is used to ensure that external contactors controlled by the safety module outputs are able to interrupt the safety circuit. This functionality is implemented by adding the external contactor feedback to the start condition of the safety module.

The external contactor must provide a feedback through a normally closed auxiliary contact forcibly guided by its normally open safety contact. The start condition is valid only when the external feedback (normally closed) is closed.


External device monitoring can be performed on:

- 1 channel.
External feedback is provided to the start condition.
- 2 channels for short circuit detection.
External feedback is provided to the start condition and to the **S4** input.

NOTE: The state of the external device is only monitored when the safety module is analyzing the start condition validity. When outputs are activated, the external device is not monitored.

EDM Configuration With One Channel

This figure shows an example of 1 channel EDM with the external feedback (**K3** and **K4**) added to the start condition, and **S41** directly connected to **S42**:

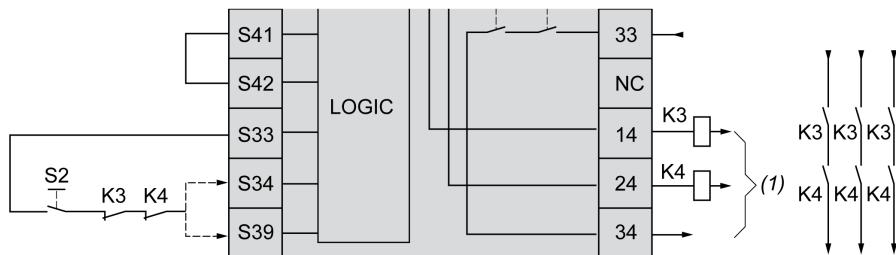

K3 External contactor with a normally closed feedback and normally open safety contact


K4 External contactor with a normally closed feedback and normally open safety contact

S2 Start switch

(1) Safety outputs

EDM Configuration With Two Channels

This figure shows an example of 2 channels EDM with one external feedback added to the start condition (**K3**), and the other feedback (**K4**) connected to **S41** and **S42**:

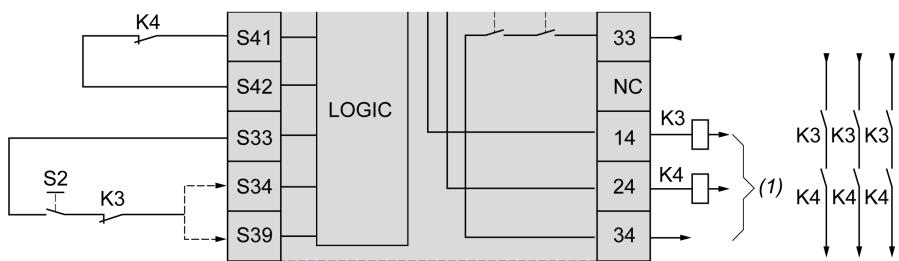

K3 External contactor with a normally closed feedback and normally open safety contact

K4 External contactor with a normally closed feedback and normally open safety contact

S2 Start switch

(1) Safety outputs


Synchronization Time Monitoring for TM3SAK6R / TM3SAK6RG

Description

The synchronization time monitoring is relevant for 2 channel applications. It monitors both inputs to determine that they are activated simultaneously (within a defined time).

When the synchronization time monitoring is enabled, the outputs are allowed to be activated if both input **S2** (S21-S22) and input **S3** (S31-S32) are activated within 2 or 4 seconds. The defined time depends on which input is activated first as explained in the following figure. The outputs are not activated if the synchronization time is expired.

This figure represents the synchronization time monitoring chronogram on a TM3SAK6R• module in a 2 channel application:

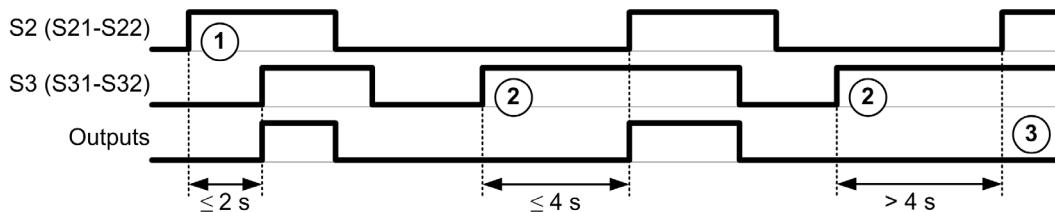

Events description:

1. **S2** operated before **S3**
2. **S3** operated before **S2**
3. Outputs are not activated because the synchronization time is expired.

The synchronization time monitoring allows to detect a closed input without intention (short circuit) before the activation of the other input.

Synchronization Time Monitoring Control

The synchronization time monitoring is enabled or disabled by the system logic controller through a communication with the safety module on the TM3 Bus.

The synchronization time monitoring is an additional feature that contributes to the safety system, but cannot itself provide for functional safety.

WARNING

MISUSE OF THE INTERNAL SYNCHRONIZATION TIME CONDITION

Do not use the synchronization time monitoring to control safety-related operations.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

When enabled, the synchronization time is monitored by the module internal safety-related microcontroller.

In a 2 channel application, **S2** and **S3** simultaneous activation is monitored if SyncOn bit is set to 1.
For more information, refer to the TM3 Programming Guide.

Section 5.3

General Principles: TM3 Safety Operation Modes

What Is in This Section?

This section contains the following topics:

Topic	Page
Power-On Condition	79
Enable Condition	80
Output Response Time	81
On Delay and Restart Delay	82

Power-On Condition

Description

When applying power to the safety module, the outputs are activated only if these four conditions are fulfilled:

- The start condition ([see page 71](#)) is valid.
- The safety conditions (safety-related inputs) indicate to activate the outputs.
- The internal enable ([see page 80](#)) condition is valid.

WARNING

UNINTENDED EQUIPMENT OPERATION

Do not use automatic start if a start interlock is required in your application after a power cycle.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Enable Condition

Description

The enable condition is a module internal control required to allow the internal relays to be switched on. The internal relays can only be switched on if the following conditions are fulfilled:

- The start condition ([see page 71](#)) is valid.
- The safety conditions (safety-related inputs) indicate to activate the outputs.
- The internal enable condition is valid.

Once the safety outputs are activated, they are deactivated if either the enable condition is not valid or the safety conditions are no longer valid.

Enable Condition

The enable condition is set by the logic controller through a communication with the safety module on the TM3 Bus.

WARNING

MISUSE OF THE INTERNAL ENABLE CONDITION

Do not use the internal enable condition, transacted over the TM3 Bus, to control safety-related operations.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

The enable condition is enabled by the system logic controller through a communication on the TM3 Bus.


The enable condition is disabled by:

- The system logic controller through a communication on the TM3 Bus.
- The module internal safety-related microcontroller when:
 - The synchronization time ([see page 76](#)) is enabled and a time-out occurs.
 - The TM3 Bus time-out occurs.

Output Response Time

Description

This figure represents the response time (t_r) between the opening of one input (safety condition invalid) and all outputs deactivation:

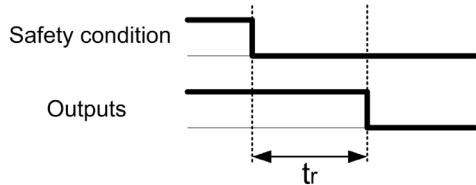

NOTE: $t_r \leq 20$ ms

On Delay and Restart Delay

On Delay Description

On delay represents the time elapsed between the enabling of the condition for activation and the activation of the outputs.

NOTE: On delay \leq 100 ms

Restart Delay Description

Restart delay represents the time required to reactivate internal relays after their deactivation.

NOTE: Restart delay \leq 300 ms

Section 5.4

I/O Mapping: TM3 Safety Modules

What Is in This Section?

This section contains the following topics:

Topic	Page
TM3SAC5R / TM3SAC5RG I/O Mapping	84
TM3SAF5R / TM3SAF5RG I/O Mapping	85
TM3SAFL5R / TM3SAFL5RG I/O Mapping	87
TM3SAK6R / TM3SAK6RG I/O Mapping	89

TM3SAC5R / TM3SAC5RG I/O Mapping

I/O Mapping Tab

Variables are defined and named in the **I/O Mapping** tab. Additional information such as topological addressing is also provided in this tab.

This table describes the **I/O Mapping** tab:

Variable	Channel		Type	Description
Diagnostics	IW0		WORD	-
ixModule_x_OutputOn	Bit 0	OutputOn	BOOL	Safety output on
ixModule_x_Supply	Bit 1	Supply	BOOL	Supply available (A1/A2)
ixModule_x_SupplyFail	Bit 2	SupplyFail	BOOL	Supply out of tolerance Acceptable range: 20.4...28.8 Vdc
-	Bit 3	Not applicable	BOOL	Not valid as a TM3 safety function block output
-	Bit 4	Not applicable	BOOL	Not valid as a TM3 safety function block output
ixModule_x_Start	Bit 5	Start	BOOL	Start active
ixModule_x_K1	Bit 6	K1	BOOL	Relay K1 activated
ixModule_x_K2	Bit 7	K2	BOOL	Relay K2 activated
-	Bit 8...11	Not applicable	BOOL	Not valid as a TM3 safety function block outputs
ixModule_x_WaitingForStart	Bit 12	WaitingForStart	BOOL	Waiting for start condition (see page 71)
-	Bit 13	Not applicable	BOOL	Not valid as a TM3 safety function block output
-	Bit 14, bit 15	Reserved	BOOL	-
Outputs	QB0		BYTE	-
qxModule_x_Enable	Bit 0	Enable	BOOL	TRUE enables the activation of safety outputs.
qxModule_x_ResetModule	Bit 1	ResetModule	BOOL	TRUE resets the module: current source switched off, outputs deactivated, and interlock reset.
qxModule_x_KeepAlive	Bit 2	KeepAlive	BOOL	TRUE defines the safety function remains active even when the TM3 bus is unavailable.

For further generic descriptions, refer to I/O Configuration Tab Description ([see page 22](#)).

TM3SAF5R / TM3SAF5RG I/O Mapping

I/O Mapping Tab

Variables are defined and named in the **I/O Mapping** tab. Additional information such as topological addressing is also provided in this tab.

This table describes the **I/O Mapping** tab:

Variable	Channel		Type	Description
Diagnostics	IW0		WORD	-
ixModule_x_OutputOn	Bit 0	OutputOn	BOOL	Safety output on
ixModule_x_Supply	Bit 1	Supply	BOOL	Supply available (A1/A2)
ixModule_x_SupplyFail	Bit 2	SupplyFail	BOOL	Supply out of tolerance Acceptable range: 20.4...28.8 Vdc
ixModule_x_CH1	Bit 3	CH1	BOOL	Channel 1 active
ixModule_x_CH2	Bit 4	CH2	BOOL	Channel 2 active
ixModule_x_Start	Bit 5	Start	BOOL	Start active
ixModule_x_K1	Bit 6	K1	BOOL	Relay K1 activated
ixModule_x_K2	Bit 7	K2	BOOL	Relay K2 activated
-	Bit 8	Not applicable	BOOL	Not valid as a TM3 safety function block output
ixModule_x_S1	Bit 9	S1	BOOL	S1 active
ixModule_x_S2	Bit 10	S2	BOOL	S2 active
ixModule_x_S4	Bit 11	S4	BOOL	S4 active
ixModule_x_WaitingForStart	Bit 12	WaitingForStart	BOOL	Waiting for start condition (<i>see page 71</i>)
-	Bit 13	Not applicable	BOOL	Not valid as a TM3 safety function block output
-	Bit 14, bit 15	Reserved	BOOL	-
Outputs	QB0		BYTE	-
qxModule_x_Enable	Bit 0	Enable	BOOL	TRUE enables the activation of safety outputs.

Variable	Channel		Type	Description
qxModule_x_ResetModule	Bit 1	ResetModule	BOOL	TRUE resets the module: current source switched off, outputs deactivated, and interlock reset.
qxModule_x_KeepAlive	Bit 2	KeepAlive	BOOL	TRUE defines the safety function remains active even when the TM3 bus is unavailable.

For further generic descriptions, refer to I/O Configuration Tab Description ([see page 22](#)).

TM3SAFL5R / TM3SAFL5RG I/O Mapping

I/O Mapping Tab

Variables are defined and named in the **I/O Mapping** tab. Additional information such as topological addressing is also provided in this tab.

This table describes the **I/O Mapping** tab:

Variable	Channel		Type	Description
Diagnostics	IW0		WORD	-
ixModule_x_OutputOn	Bit 0	OutputOn	BOOL	Safety output on
ixModule_x_Supply	Bit 1	Supply	BOOL	Supply available (A1/A2)
ixModule_x_SupplyFail	Bit 2	SupplyFail	BOOL	Supply out of tolerance Acceptable range: 20.4...28.8 Vdc
ixModule_x_CH1	Bit 3	CH1	BOOL	Channel 1 active
ixModule_x_CH2	Bit 4	CH2	BOOL	Channel 2 active
ixModule_x_Start	Bit 5	Start	BOOL	Start active
ixModule_x_K1	Bit 6	K1	BOOL	Relay K1 activated
ixModule_x_K2	Bit 7	K2	BOOL	Relay K2 activated
ixModule_x_S1	Bit 8	S1	BOOL	S1 active
-	Bit 9	Not applicable	BOOL	Not valid as a TM3 safety function block output
ixModule_x_S2	Bit 10	S2	BOOL	S2 active
ixModule_x_S4	Bit 11	S4	BOOL	S4 active
ixModule_x_WaitingForStart	Bit 12	WaitingForStart	BOOL	Waiting for start condition (see page 71)
-	Bit 13	Not applicable	BOOL	Not valid as a TM3 safety function block output
-	Bit 14, bit 15	Reserved	BOOL	-
Outputs	QB0		BYTE	-
qxModule_x_Enable	Bit 0	Enable	BOOL	TRUE enables the activation of safety outputs.
qxModule_x_ResetModule	Bit 1	ResetModule	BOOL	TRUE resets the module: current source switched off, outputs deactivated, and interlock reset.

Variable	Channel		Type	Description
qxModule_x_KeepAlive	Bit 2	KeepAlive	BOOL	TRUE defines the safety function remains active even when the TM3 bus is unavailable.

For further generic descriptions, refer to I/O Configuration Tab Description ([see page 22](#)).

TM3SAK6R / TM3SAK6RG I/O Mapping

I/O Mapping Tab

Variables are defined and named in the **I/O Mapping** tab. Additional information such as topological addressing is also provided in this tab.

This table describes the **I/O Mapping** tab:

Variable	Channel		Type	Description
Diagnostics	IW0		WORD	-
ixModule_x_OutputOn	Bit 0	OutputOn	BOOL	Safety output on
ixModule_x_Supply	Bit 1	Supply	BOOL	Supply available (A1/A2)
ixModule_x_SupplyFail	Bit 2	SupplyFail	BOOL	Supply out of tolerance Acceptable range: 20.4...28.8 Vdc
ixModule_x_CH1	Bit 3	CH1	BOOL	Channel 1 active
ixModule_x_CH2	Bit 4	CH2	BOOL	Channel 2 active
ixModule_x_Start	Bit 5	Start	BOOL	Start active
ixModule_x_K1	Bit 6	K1	BOOL	Relay K1 activated
ixModule_x_K2	Bit 7	K2	BOOL	Relay K2 activated
ixModule_x_S1	Bit 8	S1	BOOL	S1 active
ixModule_x_S2	Bit 9	S2	BOOL	S2 active
ixModule_x_S3	Bit 10	S3	BOOL	S3 active
ixModule_x_S4	Bit 11	S4	BOOL	S4 active
ixModule_x_WaitingForStart	Bit 12	WaitingForStart	BOOL	Waiting for start condition (see page 71)
ixModule_x_SyncFailure	Bit 13	SyncFailure	BOOL	Synchronization time expired (see page 76)
Outputs	QB0		BYTE	-
qxModule_x_Enable	Bit 0	Enable	BOOL	TRUE enables the activation of safety outputs.
qxModule_x_ResetModule	Bit 1	ResetModule	BOOL	TRUE resets the module: current source switched off, outputs deactivated, and interlock reset.
qxModule_x_KeepAlive	Bit 2	KeepAlive	BOOL	TRUE defines the safety function remains active even when the TM3 bus is unavailable.

Variable	Channel		Type	Description
qxModule_x_SyncOn	Bit 3	SyncOn	BOOL	TRUE enables the synchronization time monitoring of S2 and S3 inputs.

For further generic descriptions, refer to I/O Configuration Tab Description ([see page 22](#)).

Section 5.5


Function Blocks: TM3 Safety Modules

TM3 Safety Modules Function Blocks

Overview

The `TM3_Safety` function block is included in the TM3 Safety library.

Graphical Representation

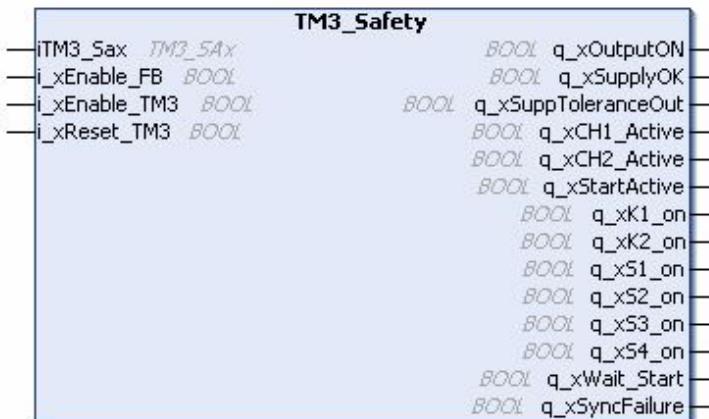

I/O Variable Description

This table describes the input variables:

Input	Type	Comment
<code>iTM3_SAx</code>	<code>TM3_SAx</code>	Reference to the local TM3 safety modules.
<code>i_xEnable_FB</code>	<code>BOOL</code>	TRUE enables the function block.
<code>i_xEnable_TM3</code>	<code>BOOL</code>	TRUE enables the activation of the hardware module outputs.
<code>i_xReset_TM3</code>	<code>BOOL</code>	TRUE deactivates the module: the current source is switched off, the outputs are deactivated, and the interlock is reset.

This table describes the output variables:

Output	Type	Comment
q_xOutputON	BOOL	0: safety output is off. 1: safety output is on.
q_xSupplyOK	BOOL	Supply is available.
q_xSuppToleranceOut	BOOL	Supply is out of tolerance.
q_xCH1_Active	BOOL	Channel 1 is active.
q_xCH2_Active	BOOL	Channel 2 is active.
q_xStartActive	BOOL	Start is active.
q_xK1_on	BOOL	Relay K1 is activated.
q_xK2_on	BOOL	Relay K2 is activated.
q_xS1_on	BOOL	S1 is active.
q_xS2_on	BOOL	S2 is active.
q_xS3_on	BOOL	S3 is active.
q_xS4_on	BOOL	S4 is active.
q_xWait_Start	BOOL	Waiting for start condition (see page 71).
q_xSyncFailure	BOOL	Synchronization time expired (see page 76).

NOTE: Not all outputs are valid for all TM3 safety module references. To determine which outputs are valid for which TM3 safety module references, see the I/O mapping for the individual references ([see page 83](#)).

Chapter 6

TM3 Transmitter and Receiver I/O Modules Configuration

Introduction

This chapter describes how to configure the TM3 transmitter and receiver I/O modules (see page 21).

What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Configuring the TM3 Transmitter and Receiver I/O Modules	94
Behavior of the TM3 Transmitter and Receiver Modules	95

Configuring the TM3 Transmitter and Receiver I/O Modules

Introduction

The TM3XTRA1 transmitter module is equipped with:

- 1 RJ-45 connector
- 1 functional ground screw
- 2 status LEDs (link and power)

The TM3XREC1 receiver module is equipped with:

- 1 RJ-45 connector
- 2 status LEDs (link and power)
- Removable 24 Vdc power supply

The transmitter expansion module is connected to the logic controller through the TM3 bus. The transmitter must be the last physical module directly connected to the logic controller.

The receiver module is connected to the transmitter module using a specific cable (VDIP1845460••).

Additional TM3 modules can then be connected to the receiver module through the extended TM3 bus.

NOTE: You cannot use TM2 expansion modules in configurations that include the TM3 transmitter/receiver modules.

Configuring the Modules

The TM3XTRA1 and TM3XREC1 expansion modules have no configurable properties in SoMachine.

Behavior of the TM3 Transmitter and Receiver Modules

Overview

The following exceptional behaviors can occur with TM3 transmitter and receiver modules:

- Transmitter/receiver cable disconnected or broken during operation
- Removing receiver module power during operation
- Receiver module disconnected during startup
- Receiver module powered on after the controller

The TM3 modules before the transmitter module are called "Local", and those after the receiver module are called "Remote".

The I/O that may be embedded in your controller is independent of the I/O that you may have added in the form of I/O expansion. It is important that the logical I/O configuration within your program matches the physical I/O configuration of your installation. If you add or remove any physical I/O to or from the I/O expansion bus, update your application configuration (this is also true for any field bus devices you may have in your installation). Otherwise, there is the potential that the expansion bus or field bus will no longer function while the embedded I/O that may be present in your controller will continue to operate.

WARNING

UNINTENDED EQUIPMENT OPERATION

Update the configuration of your program each time you add or delete an I/O expansion, or you add or delete any devices on your field bus.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Transmitter/Receiver Cable Disconnected or Broken During Operation

The logic controller continuously retries to access the modules attached to the receiver module.

When the receiver module detects cable disconnection:

- All local modules continue operating.
- All remote modules are put into the **Reset** state.
- I/O LED is on, and TM3 status bit (`plc_r.i_lwSystemFault_1.1`) is set to 0.
- Diagnostic information for the remote modules is available in the `TM3_MODULE_R` array.
- In SoMachine a red sign appears in front of the TM3 module with detected errors.

Reconnecting the cable does not restore normal operation. Only a logic controller power cycle or reset restores normal operation after disconnecting and then reconnecting the cable.

Removing Receiver Module Power During Operation

When the receiver module detects cable disconnection:

- All local modules continue operating.
- I/O LED is on, and TM3 status bit (`plc_r.i_lwSystemFault_1.1`) is set to 0.
- Diagnostic information for the remote modules is available in the `TM3_MODULE_R` array.
- In SoMachine a red sign appears in front of the TM3 module with detected errors.

Restoring power results in the TM3 modules attached to the receiver module assuming a **Reset** state. Only a logic controller power cycle or reset restores normal operation.

Receiver Module Disconnected During Start-up

If the receiver module was not connected at logic controller start-up, nothing happens because the TM3 bus is not started.

Receiver Module Powered on After the Controller

If two separate power supplies are used for the receiver module and the controller, the power supply of the receiver module must be switched on before the controller power supply. The TM3 bus does not start if the correct order of power application is not respected, and all modules are in **Reset** state (all outputs are forced to 0).

If the receiver module and the logic controller are supplied by the same power supply, the whole configuration starts operating.

If only the receiver module is powered (logic controller not supplied), the TM3 modules after the receiver module are in **Reset** state (all outputs are forced to 0).

Glossary



D

digital I/O

(digital input/output) An individual circuit connection at the electronic module that corresponds directly to a data table bit. The data table bit holds the value of the signal at the I/O circuit. It gives the control logic digital access to I/O values.

E

expansion bus

An electronic communication bus between expansion I/O modules and a controller.

F

function

A programming unit that has 1 input and returns 1 immediate result. However, unlike FBs, it is directly called with its name (as opposed to through an instance), has no persistent state from one call to the next and can be used as an operand in other programming expressions.

Examples: boolean (AND) operators, calculations, conversions (BYTE_TO_INT)

H

HE10

Rectangular connector for electrical signals with frequencies below 3 MHz, complying with IEC 60807-2.

R

RJ-45

A standard type of 8-pin connector for network cables defined for Ethernet.

T

terminal block

(terminal block) The component that mounts in an electronic module and provides electrical connections between the controller and the field devices.

Index



A

analog input modules
 specifications, 16
analog mixed I/O modules
 specifications, 18
analog output modules
 specifications, 17
automatic
 start, 71

C

configuration, 25, 68, 94

D

delay
 on, 82
 restart, 82
digital I/O modules
 specifications, 13, 14, 15, 19, 21

E

EDM
 external device monitoring, 74
enable, 80
expansion modules
 adding, 22
 configuration, 22
 properties, 22
Expert modules, 62
external device monitoring
 EDM, 74

I

I/O configuration general information, 13
interlock, 70

M

monitored
 start, 71

N

non-monitored
 start, 71

O

on
 delay, 82
output
 response time, 81

P

power-on, 79

R

regular inputs, 13, 14, 15, 19, 21
regular transistor outputs, 13, 14, 15, 19, 21
relay outputs, 13, 14, 15, 19, 21
reset, 70
response time
 output, 81
restart
 delay, 82

S

specifications
 analog input modules, 16
 analog mixed I/O modules, 18
 analog output modules, 17
 digital I/O modules, 13, 14, 15, 19, 21

start

 automatic, 71

 monitored, 71

 non-monitored, 71

synchronization time, 76

T

TeSys module, 62

TM3, 11

TM3 analog I/O modules

 diagnostic, 58

 TM3AI2H / TM3AI2HG , 29

 TM3AI4 / TM3AI4G , 31

 TM3AI8 / TM3AI8G , 33

 TM3AM6 / TM3AM6G , 51

 TM3AQ2 / TM3AQ2G , 46

 TM3AQ4 / TM3AQ4G , 48

 TM3TI4 / TM3TI4G , 35

 TM3TI8T / TM3TI8TG , 39

 TM3TM3 / TM3TM3G , 54

TM3 digital, 11

TM3 digital I/O expansion modules

 TM3, 25

TM3 expert I/O expansion modules

 TM3, 94

 TM3XTYS4, 62, 63

TM3 safety expansion modules

 TM3, 68

TM3 safety modules

 TM3SAC5R / TM3SAC5RG , 84

 TM3SAF5R / TM3SAF5RG , 85

 TM3SAFL5R / TM3SAFL5RG, 87

 TM3SAK6R / TM3SAK6RG , 89